
VW/Audi SFD (Vehicle Diagnostic Protection) Unlocking Operation Instructions

Function Execution Background


If the SFD (Vehicle Diagnostic Protection) needs to be unlocked in the current control unit but it is not unlocked, the matching, basic setting, coding, and other functions of this control unit may fail. This document takes "Manual SFD Unlocking" of "19 Data Bus OBD Interface" as an example.

Procedure


- 1. Turn on the ignition switch, connect to the diagnostic connector, and choose VW V29.05 or a later version.
- 2. Choose [Full Systems List].

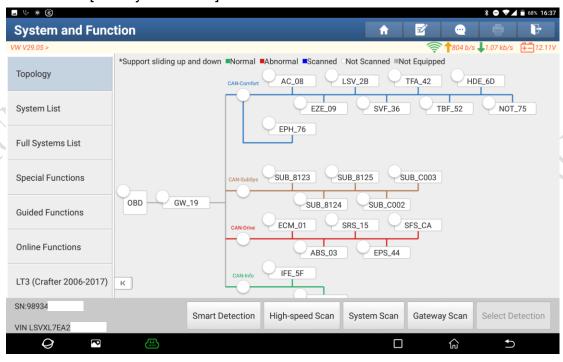

3. Choose [19 Data Bus OBD Interface].

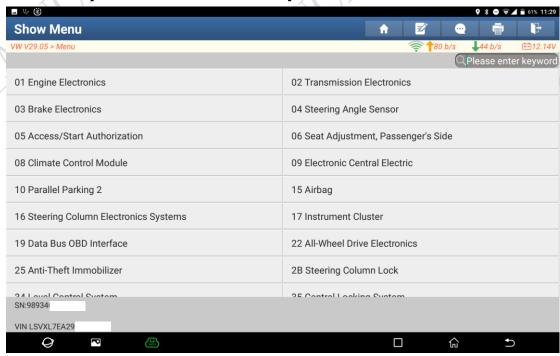


4. Then, choose "SFD (Vehicle Diagnostic Protection) Activation".

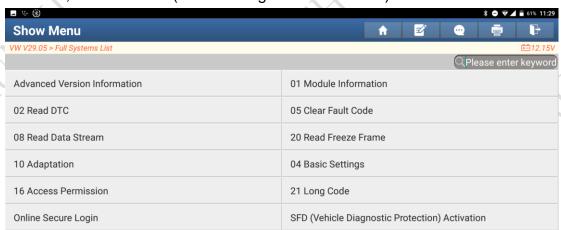





5. At this time, the SFD is in the locked status. Choose "Manual SFD Activation".

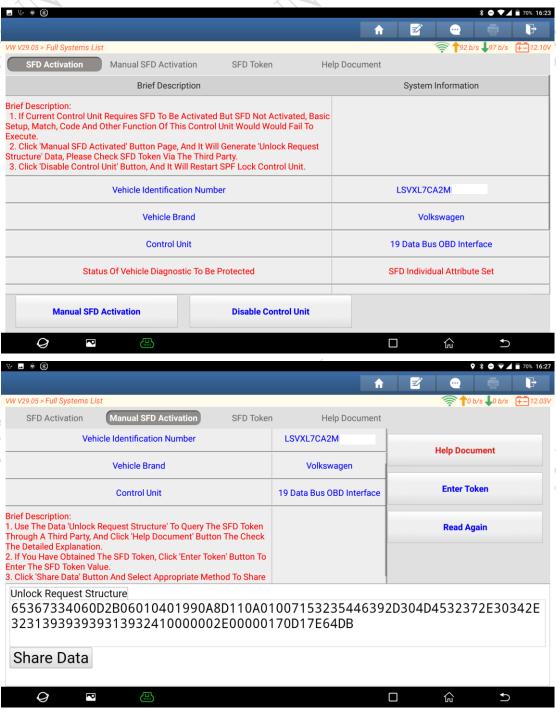

6. Next, click "Share Data". There are three share ways. Here we use the QR code and server modes to share and obtain data.

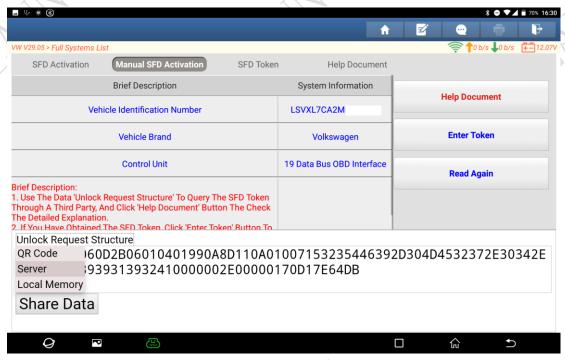


7. First introduce the "Server" share mode. Choose the "Server" option, share the data of "Unlock Request Structure" to the server, click OK, and then scan the QR code with WeChat/Alipay on your phone, or directly input the website address on the web browser of your phone or computer to access the data sharing page.

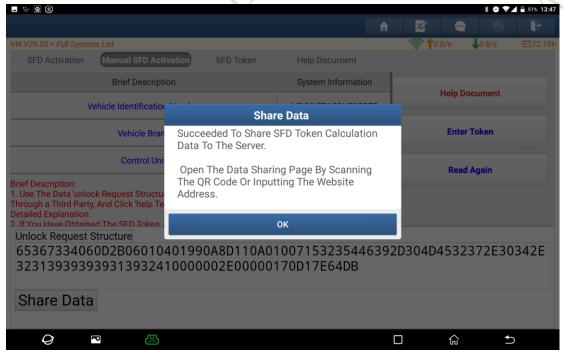





8. The data sharing page opened on the phone or computer is as follows.

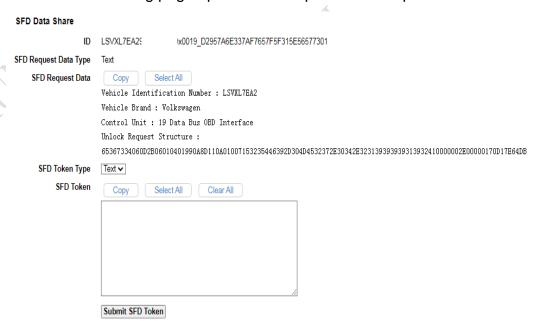


9. Copy the data of "Unlock Request Structure", send it to a third party (Taobao seller, etc.) for calculation, paste the calculated SFD token value in the "SFD Token" box, and then submit the token data until a success message is displayed, as shown in the figure below.

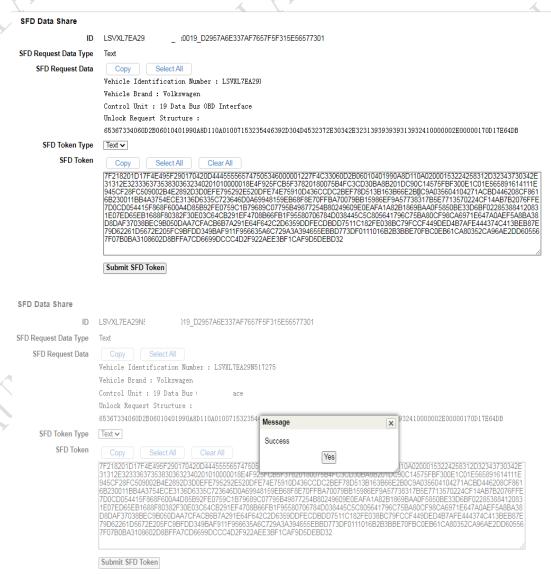


10. Next, choose "SFD Token" in the diagnostic device, and then click the "Server" option in the "Get Data" button to obtain the SFD token data submitted in the previous step.

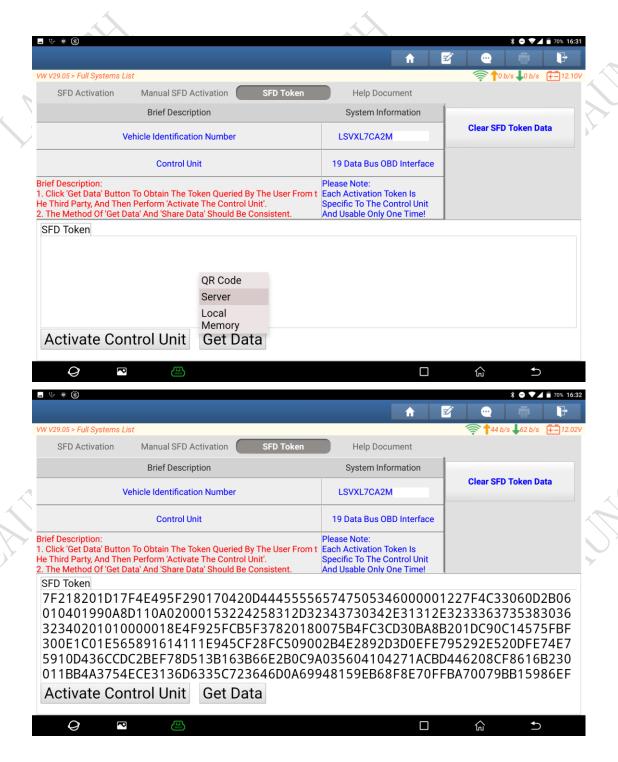

11. After obtaining the SFD token data, click "Activate Control Unit" to unlock. An unlocking success message is displayed as shown in the figure below.

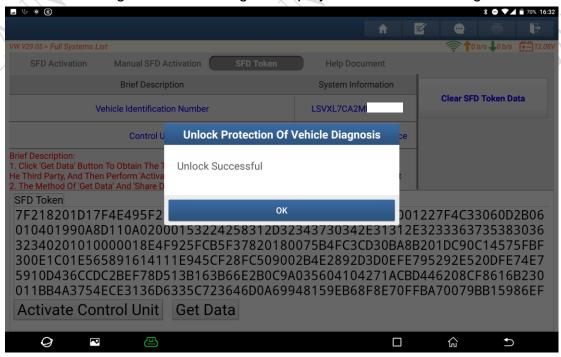


12. If you use the "QR Code" share mode, the procedure is as follows: Choose "Manual SFD Activation" and then choose the "QR Code" option from the "Share Data" button.

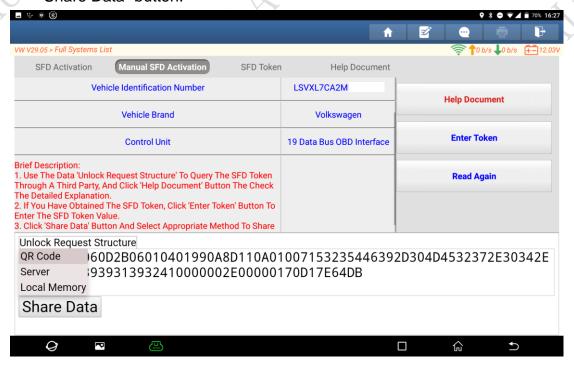


13. Use Alipay or WeChat to scan the QR code.




14. Share the scanned "Unlock Request Structure" data with a third party (Taobao seller, etc.) for calculation.

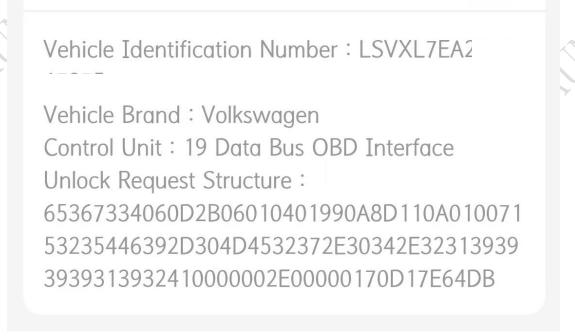


15. Choose "SFD Token" in the diagnostic device, and then choose the "QR Code" option from the "Get Data" button.

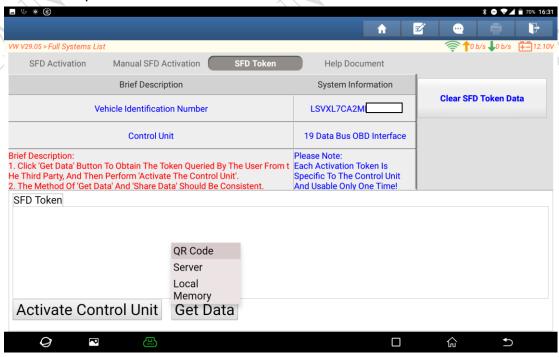


16. Then, use the QR code scanning window to scan the SFD token data QR code provided by the third party.

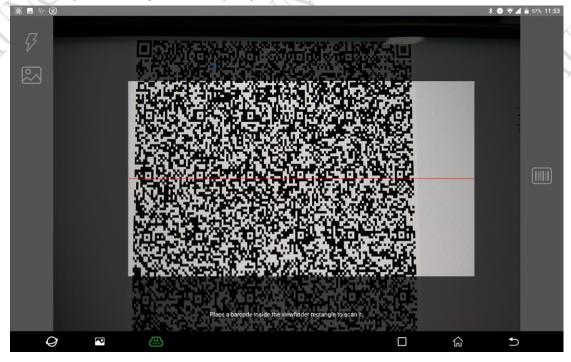

17. After scanning is completed, the obtained SFD token data is shown in the figure below.

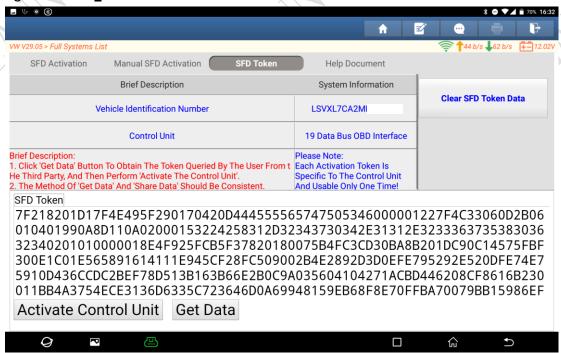

18. Click "Activate Control Unit" to unlock. An unlocking success message is displayed. You can return to the menu to perform the corresponding diagnostic function.

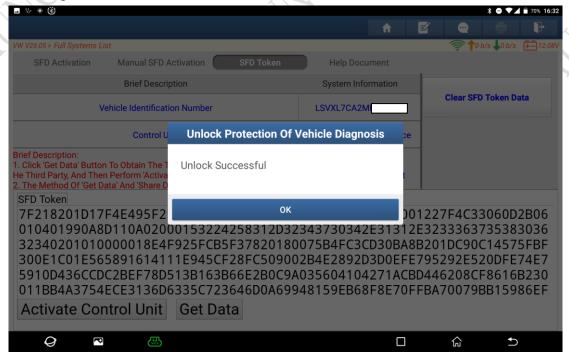

Statement

The content of this document is copyrighted by Shenzhen Launch Tech Co., Ltd., and no individual or organization may quote or reprint it without consent.