

Check Automatic Light Sensor and Rain Sensor for FIAT 500L


Supported equipment: Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5

Function description: It is necessary to execute this program for FIAT when checking the rain sensor and automatic light sensor.

Tested model: 2018/Fiat/ 500L, VIN: ZFA199000055****

1. On a PAD 5, choose [Local Diagnose] and then [FIAT] to test.

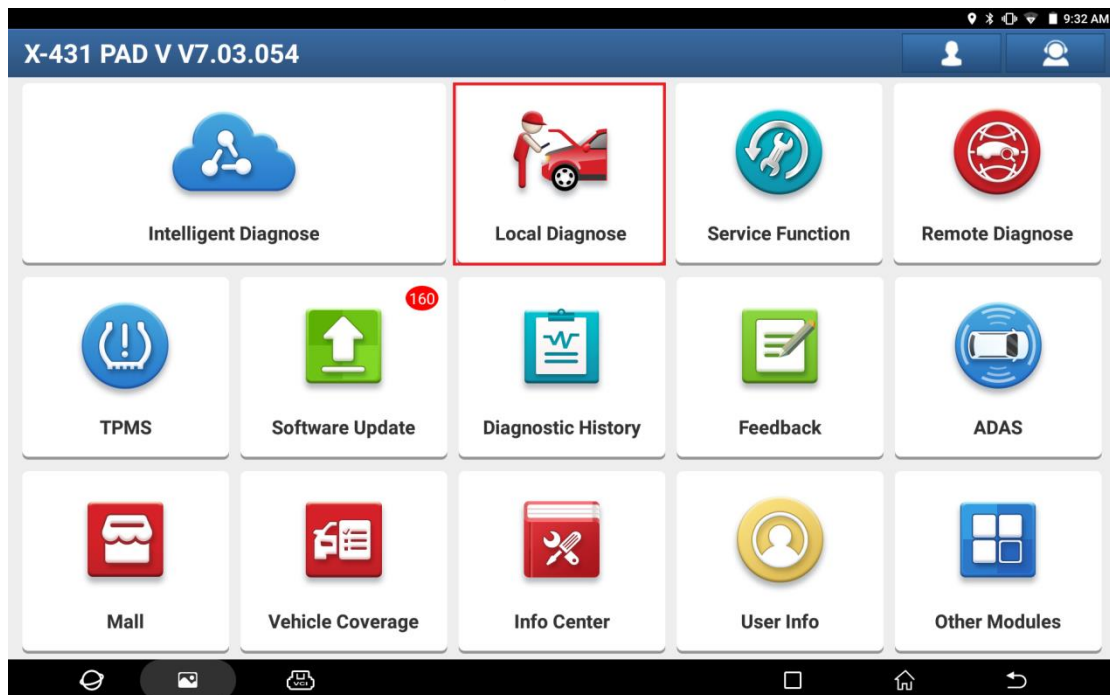

Local Diagnose

VIN scan **All** Common American European Asian Chinese Can Bus Pin Detection Purchase

Diagnosics for ABARTH by LAUNCH

Diagnosics for ALFA ROMEO by LAUNCH

Diagnosics for CHRYSLER by LAUNCH

Diagnosics for DODGE by LAUNCH

Diagnosics for **FIAT** by LAUNCH

Diagnosics for JEEP by LAUNCH

Diagnosics for LANCIA by LAUNCH

Vehicle Version Information   

Software ID	Version #
FIAT	V38.50

FIAT V38.50

Introduction

ECU Coverage:

This Software Diagnoses All FIAT Series ECUs, Including Engine, AT, ABS, SRS, A/C, Instrument, Power Steering, Body PC, Door Control, Tire Pressure Control, Parking Control And Headlamp, Etc.

(The Following Models Covered Are Only For Reference And Will Vary Constantly With The Upgrades Of Software.)

Basic Functions Include:



- Reading ECU Information
- Reading DTCs
- Clearing DTCs
- Reading Vehicle Running Data
- Vehicle component Operation Test

Special functions include:


- Key Programming([Body Module])
- Tire Pressure detection([Body Module]/[Tire Pressure Control])

Vehicle Coverage


- 2. Choose [Automatically Search] to identify car models automatically. After the car model is successfully identified, choose OK.

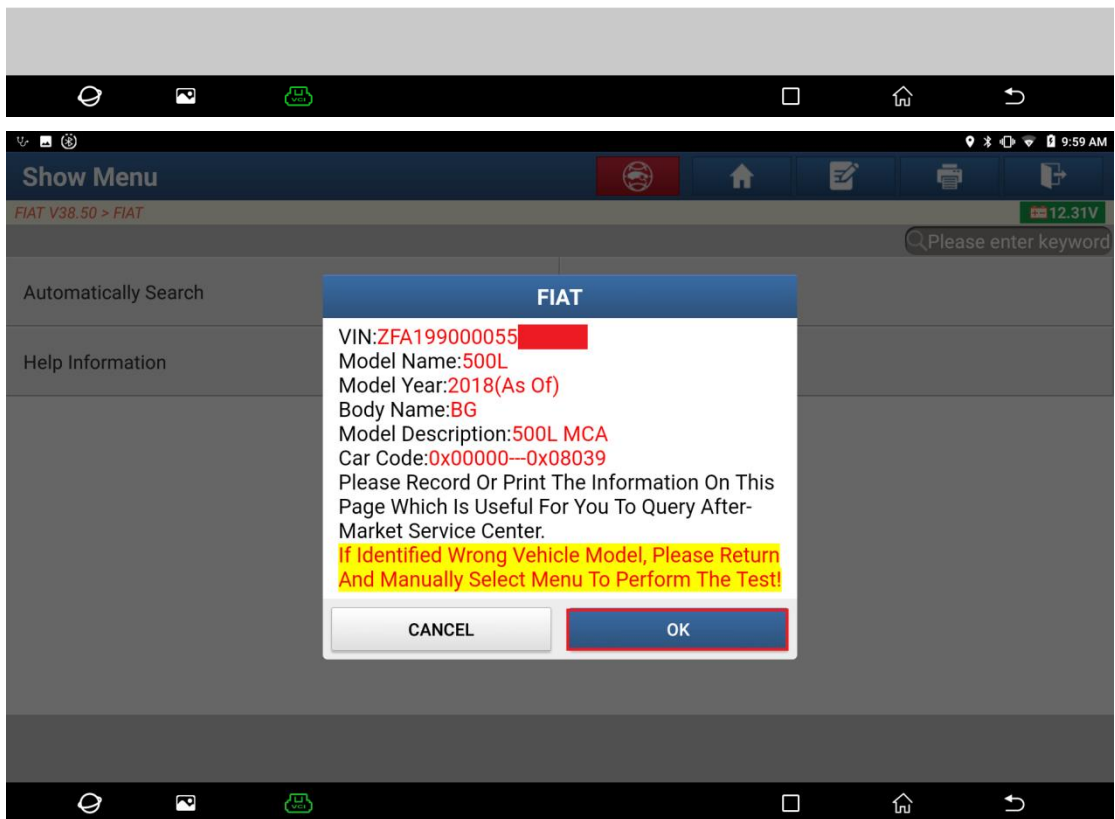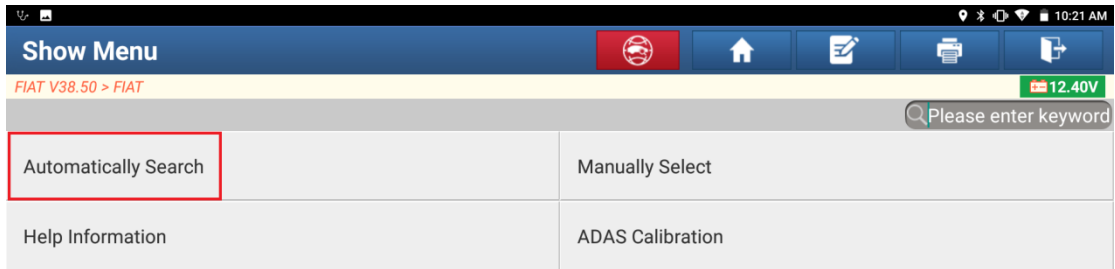


3. Choose [Yes] to unlock the SGW.

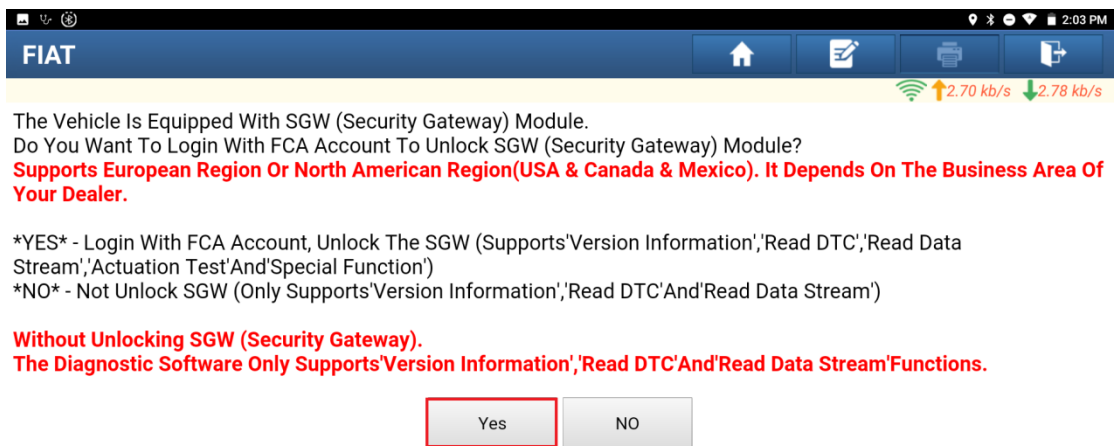


4. Choose [North America] for the region.

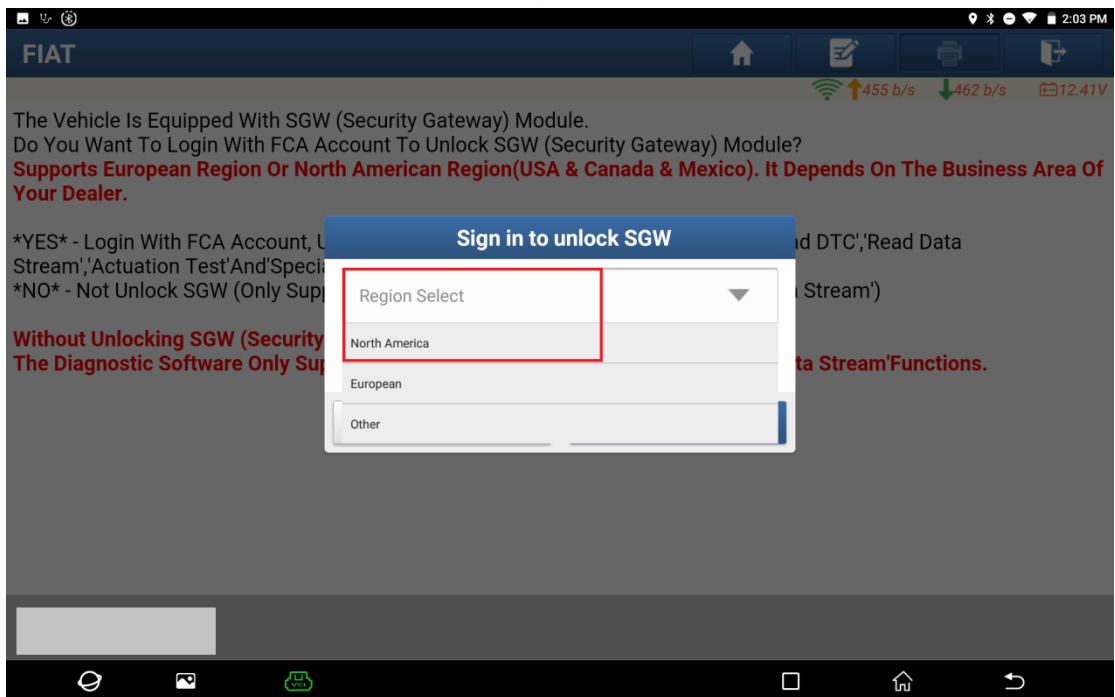


5. Input the login user name and password, and click OK.

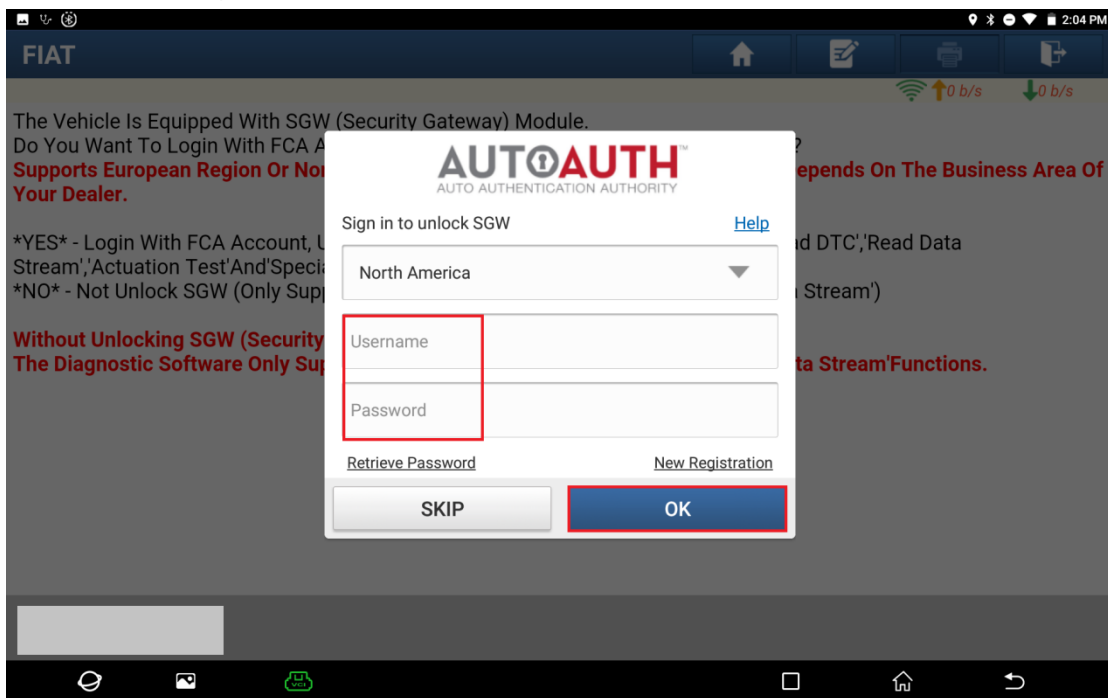


6. Unlocking is successful. Click OK.

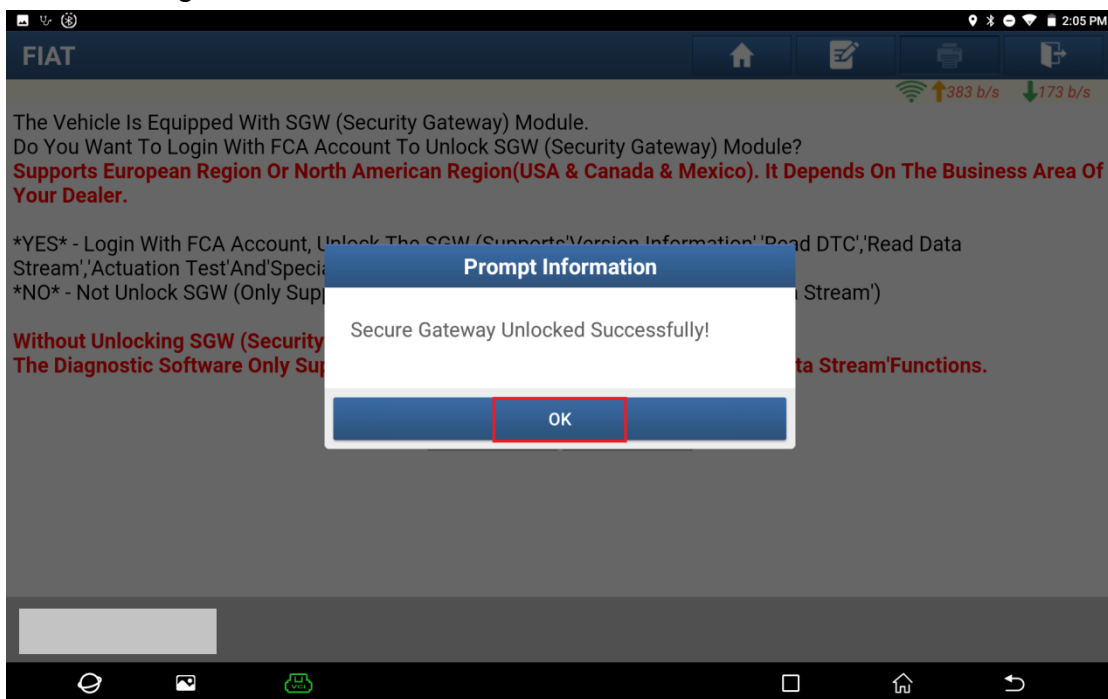



7. Click [Smart Detection] to scan the entire vehicle systems.

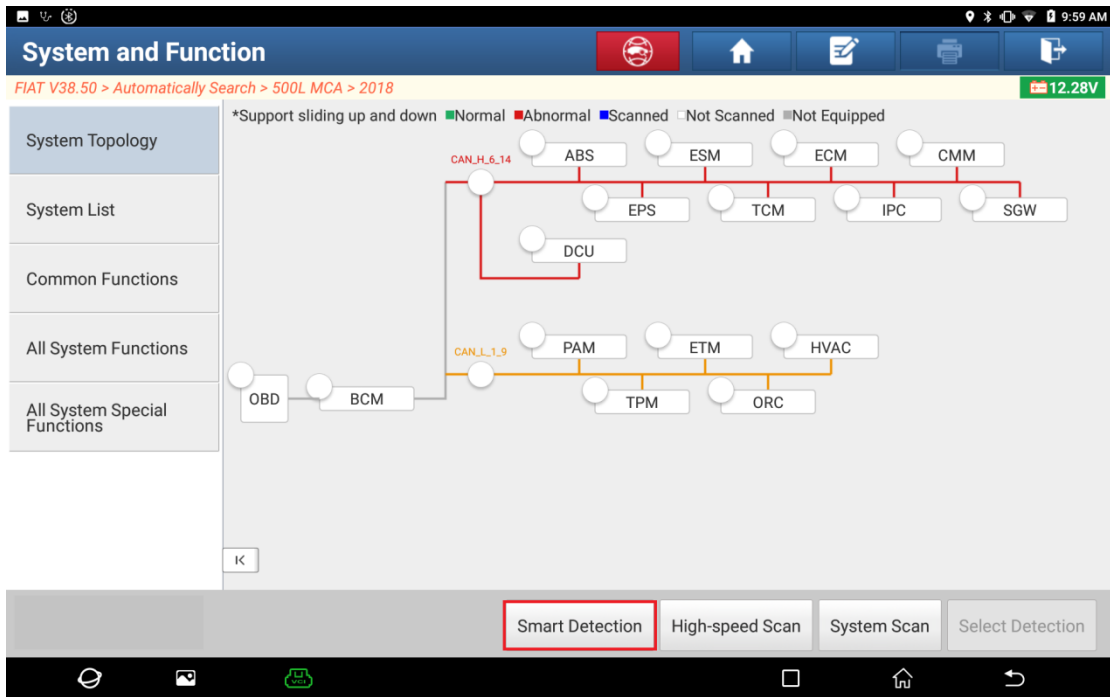


8. Click [BCM (Body Control Module)] to access the system.

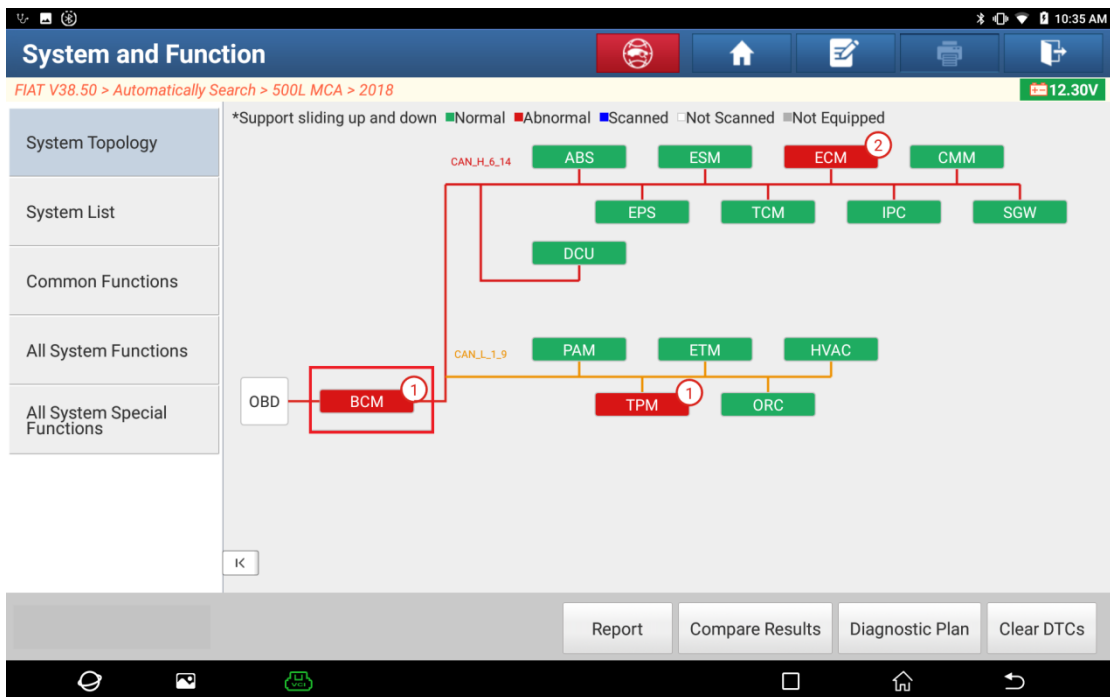


9. Click [Special Function] and click OK.

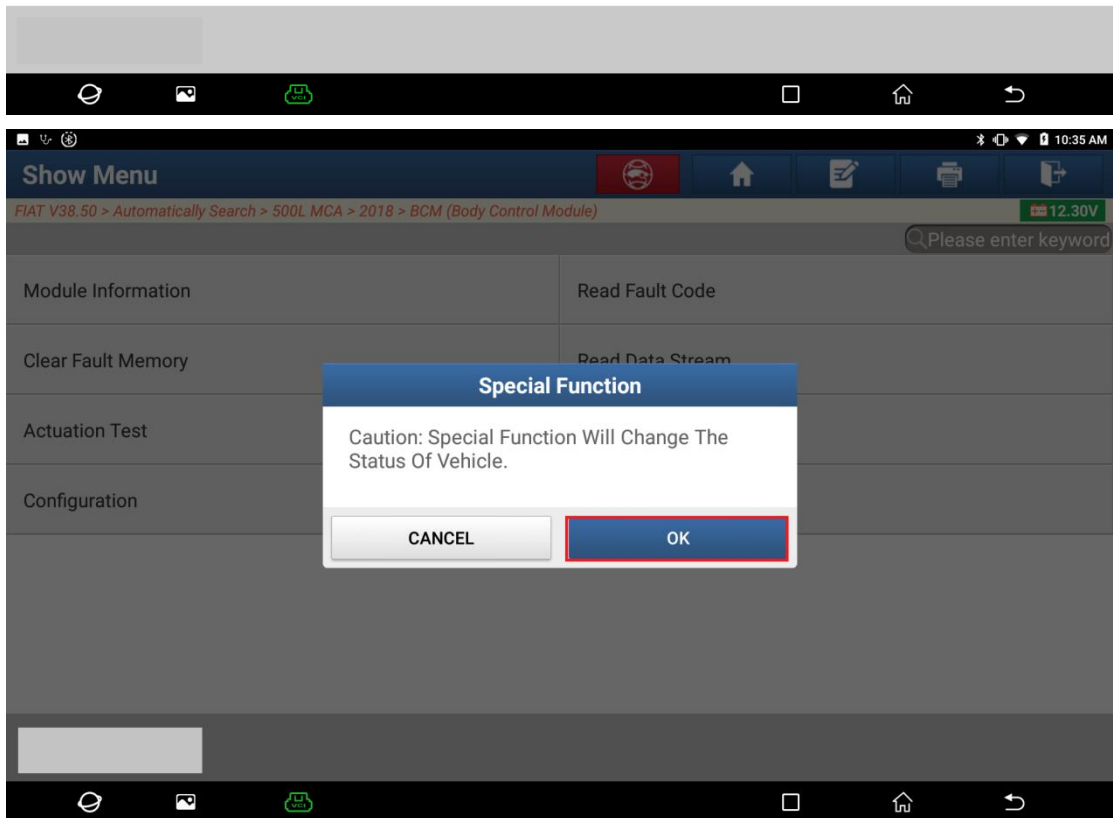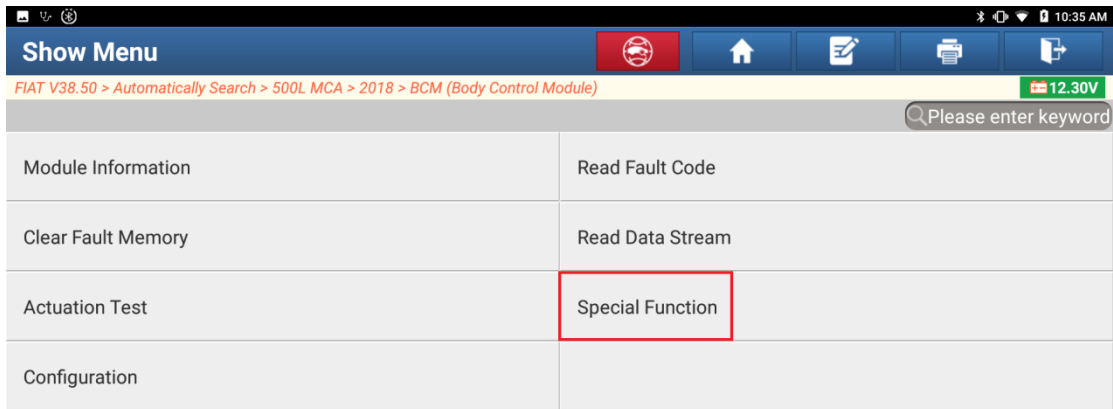


10. Choose [Misc Function].

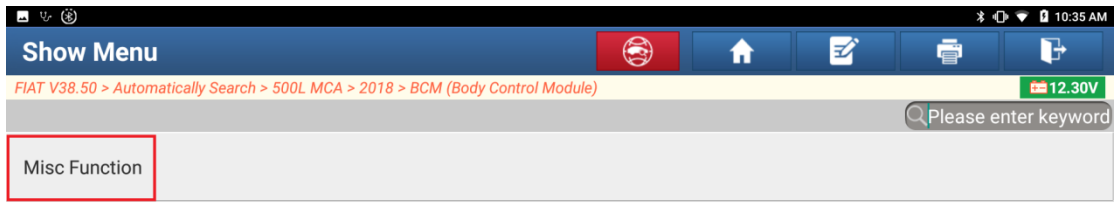


11. Choose [Check Automatic Lights Sensor And Rain Sensors].

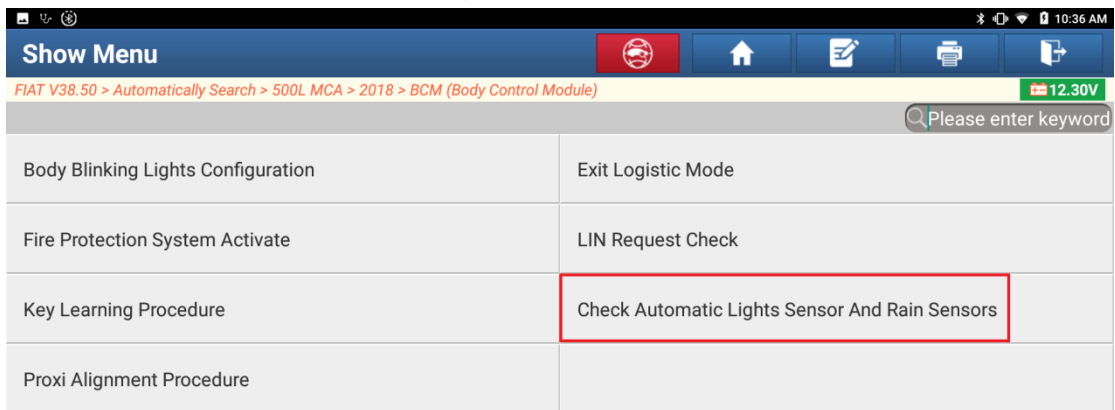

12. Click [Continue].

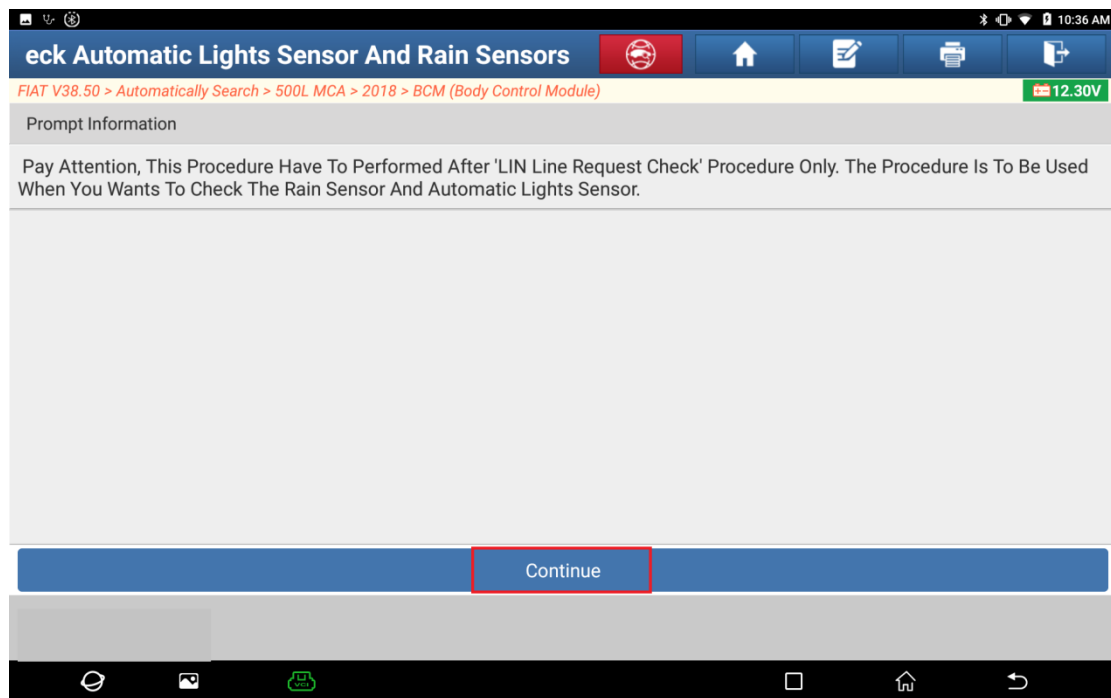

13. Click [Back]. The program is completed.

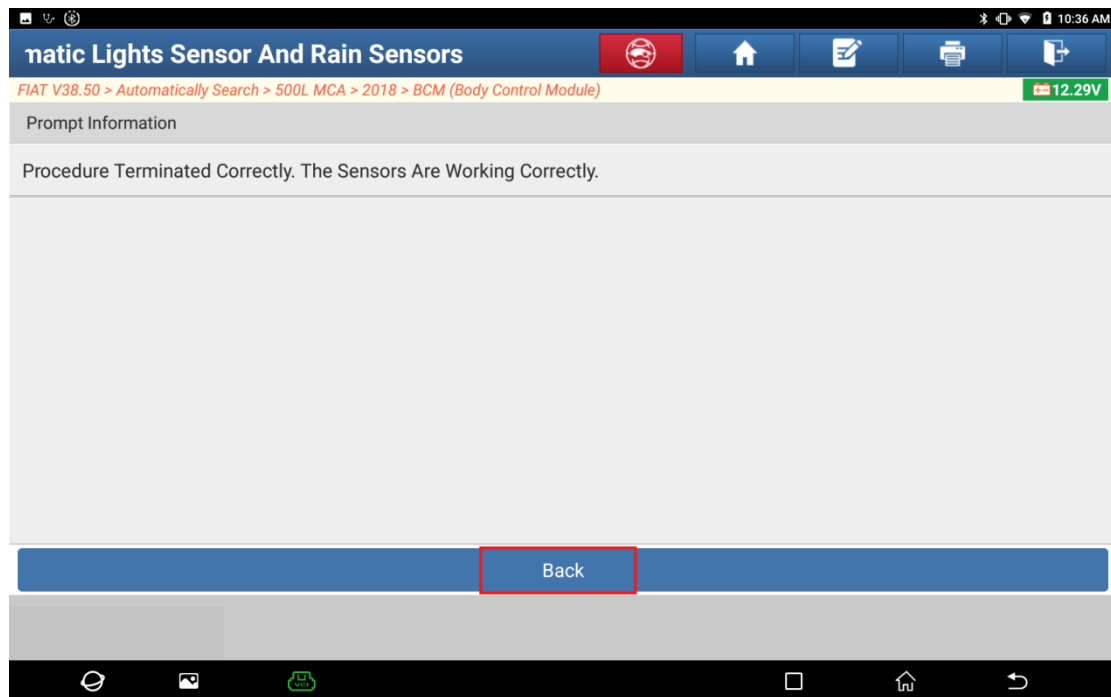

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.