FIAT Proto Intake Throttle Valve Replacement


Supported Equipment: Launch's full range of comprehensive diagnostic equipment


Current Equipment: PAD 5


Function Description: This program is performed to learn the mechanical characteristics/deviations of the intake throttle valve when it is replaced on a FIAT vehicle.

Tested Model: 2022/Fiat/Proto, VIN: VXFVBYHRMNZ0*****


1. On a PAD 5, choose [Local Diagnose] and then [Fiat] to test.

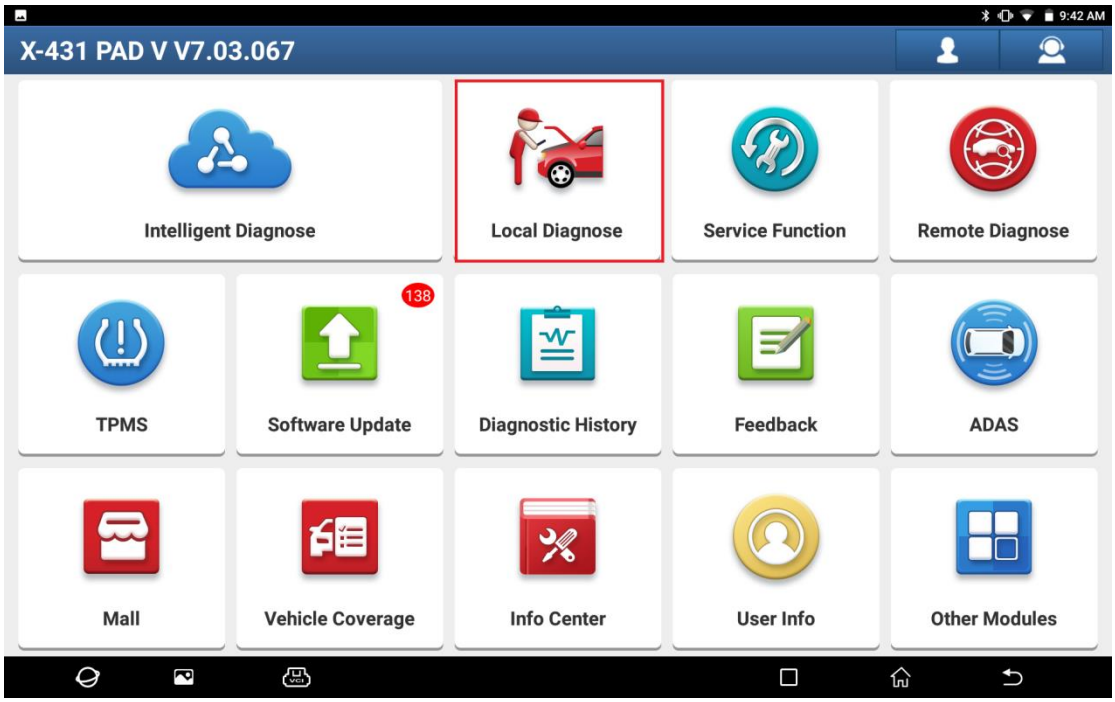

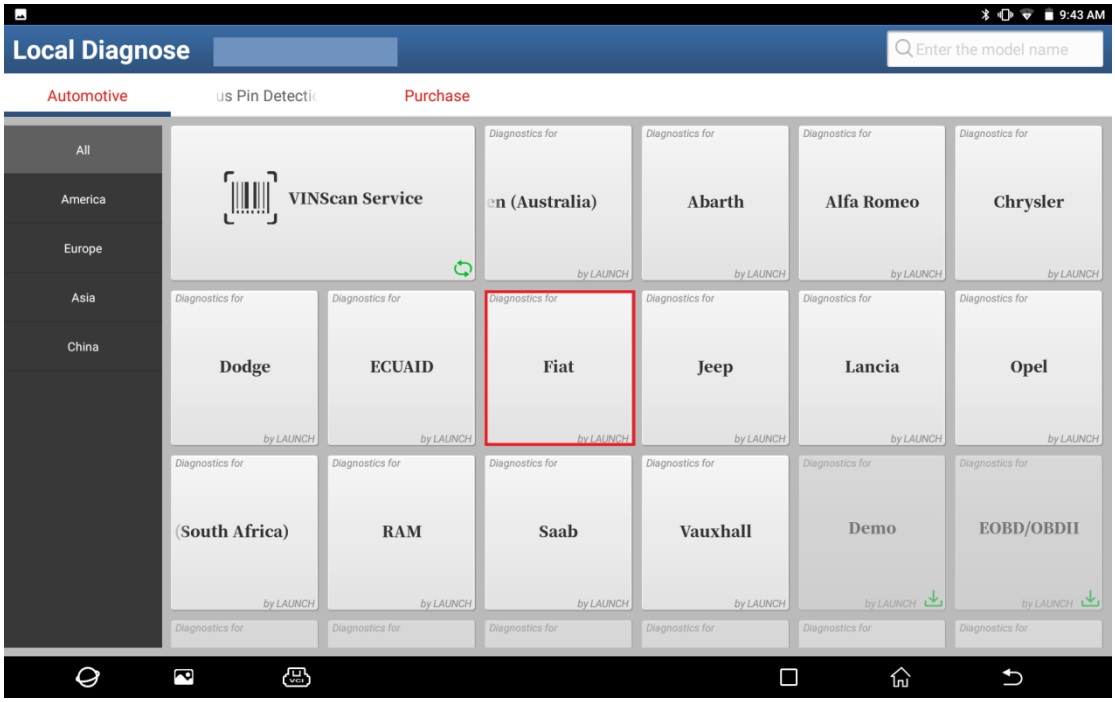

9:43 AM
Local Diagnose
Enter the model name
Automotive
us Pin Detecti
Purchase
All
America
Europe
Asia
China
VINScan Service
Diagnostics for
n (Australia)
Abarth
Alfa Romeo
Chrysler
Dodge
ECUAID
Fiat
Jeep
Lancia
Opel
(South Africa)
RAM
Saab
Vauxhall
Demo
EOBD/OBDII
by LAUNCH

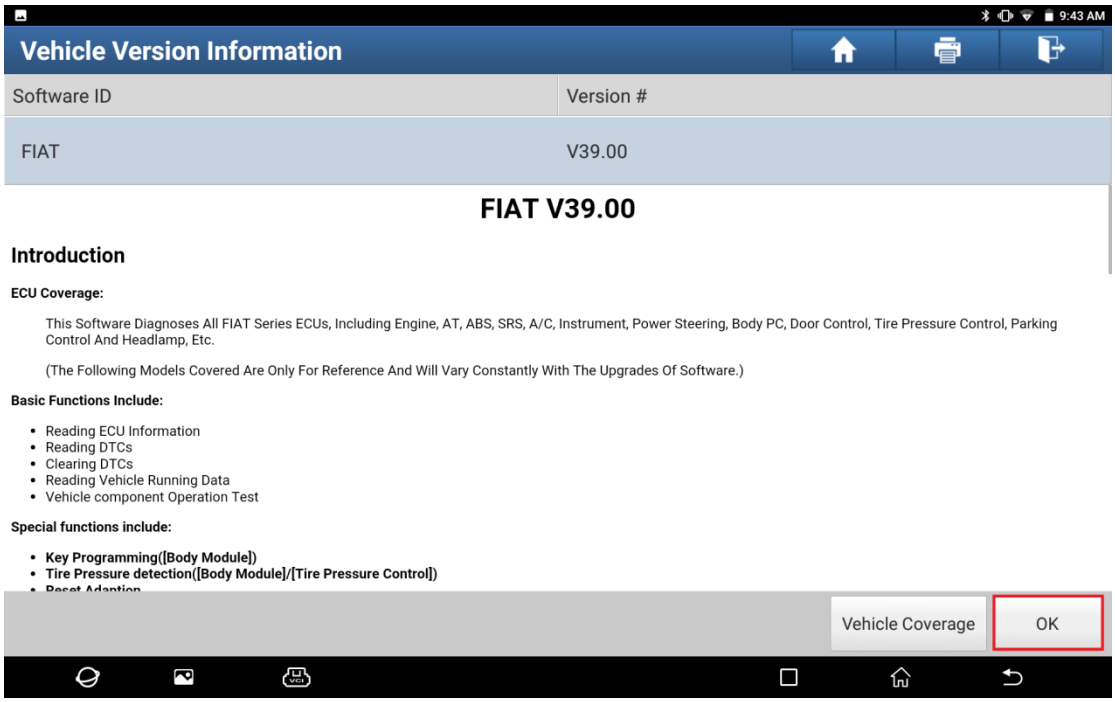
9:43 AM
Vehicle Version Information
Software ID
Version #
FIAT
V39.00
FIAT V39.00
Introduction
ECU Coverage:
This Software Diagnoses All FIAT Series ECUs, Including Engine, AT, ABS, SRS, A/C, Instrument, Power Steering, Body PC, Door Control, Tire Pressure Control, Parking Control And Headlamp, Etc.
(The Following Models Covered Are Only For Reference And Will Vary Constantly With The Upgrades Of Software.)
Basic Functions Include:
Reading ECU Information
Reading DTCs
Clearing DTCs
Reading Vehicle Running Data
Vehicle component Operation Test
Special functions include:
Key Programming([Body Module])
Tire Pressure detection([Body Module]/[Tire Pressure Control])
Vehicle Coverage
OK


2. Choose [Automatically Search] to identify vehicle models automatically. After the vehicle model is successfully identified, click "OK".

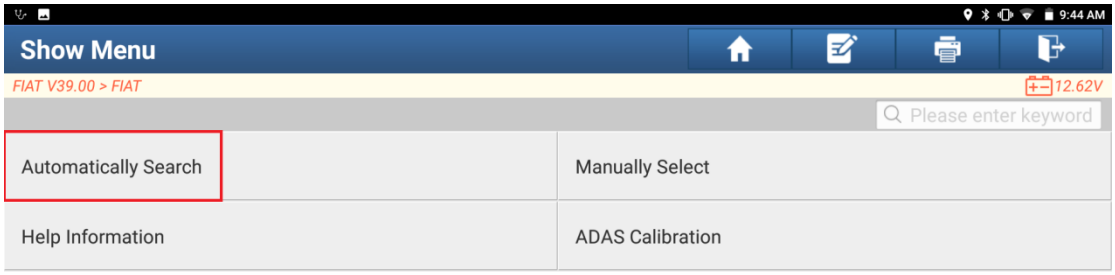




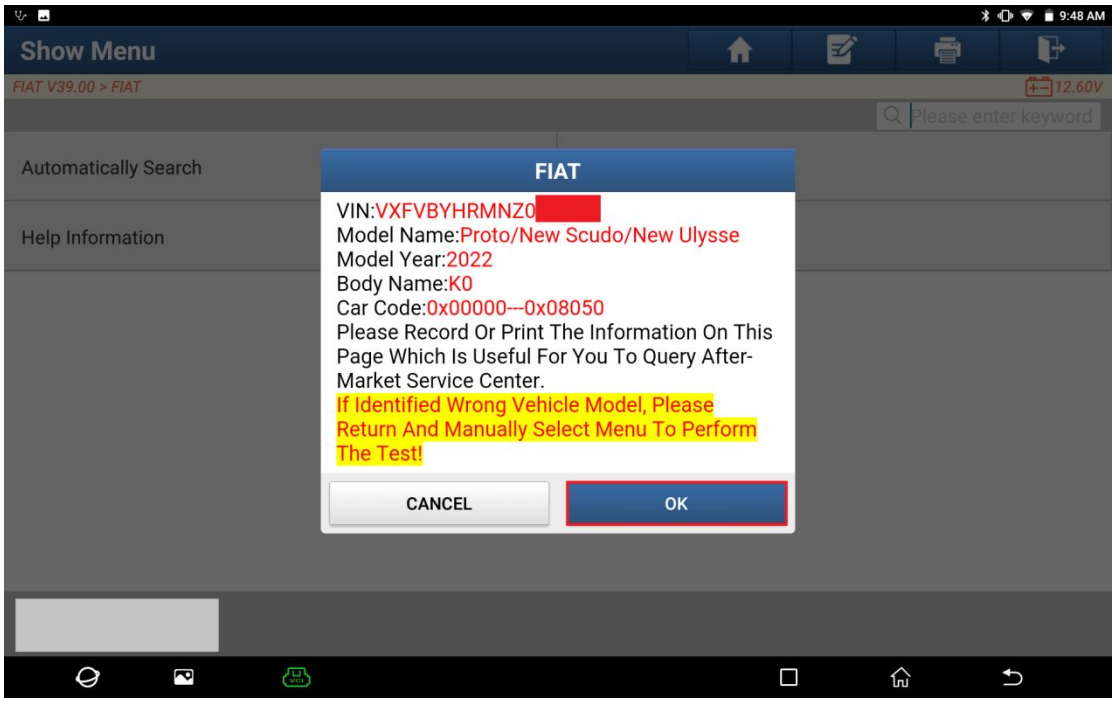


3. Choose "Yes" to unlock the SGW.

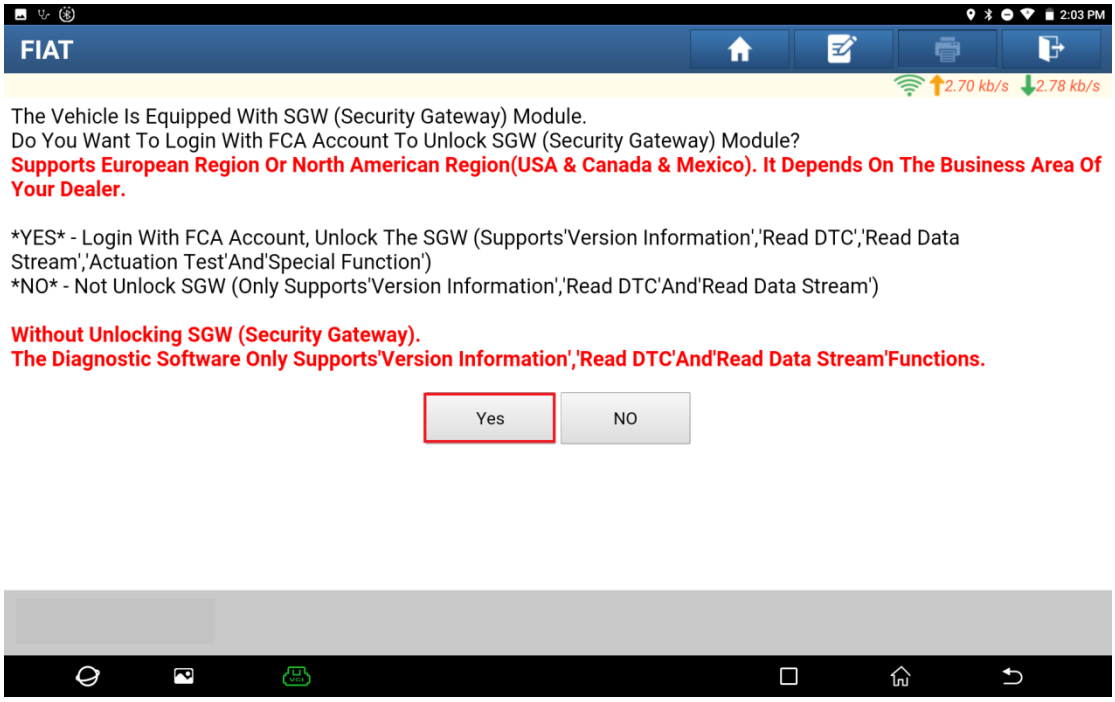


4. Choose [North America] for the region.

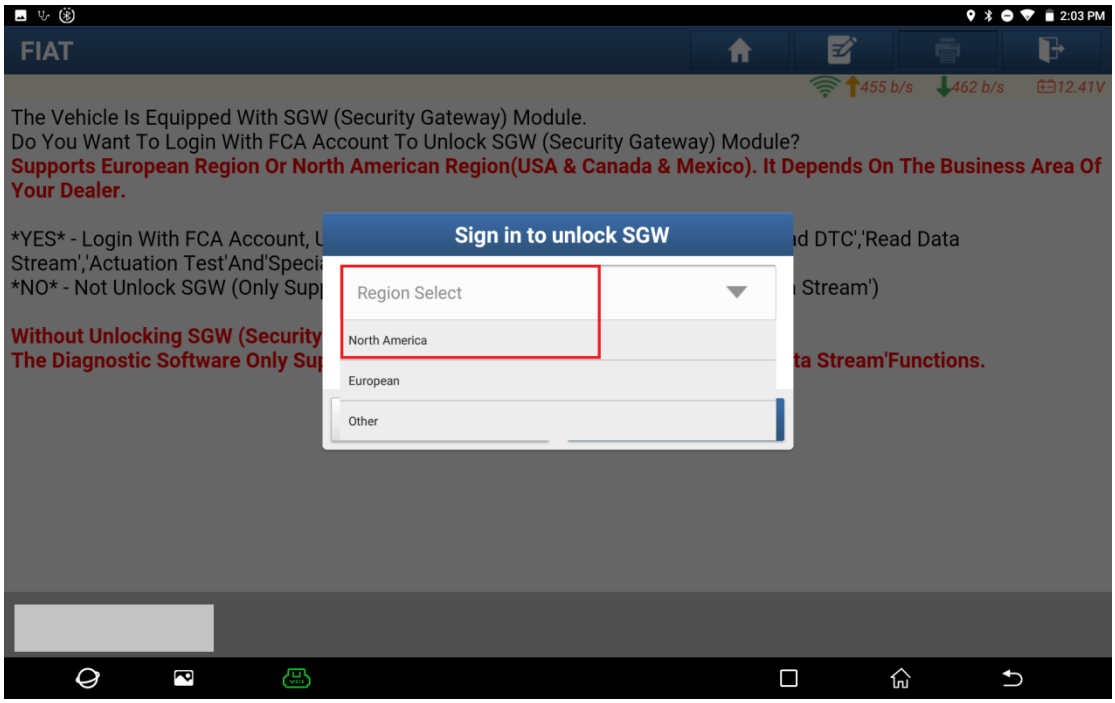


5. Input the login user name and password, and click "OK".

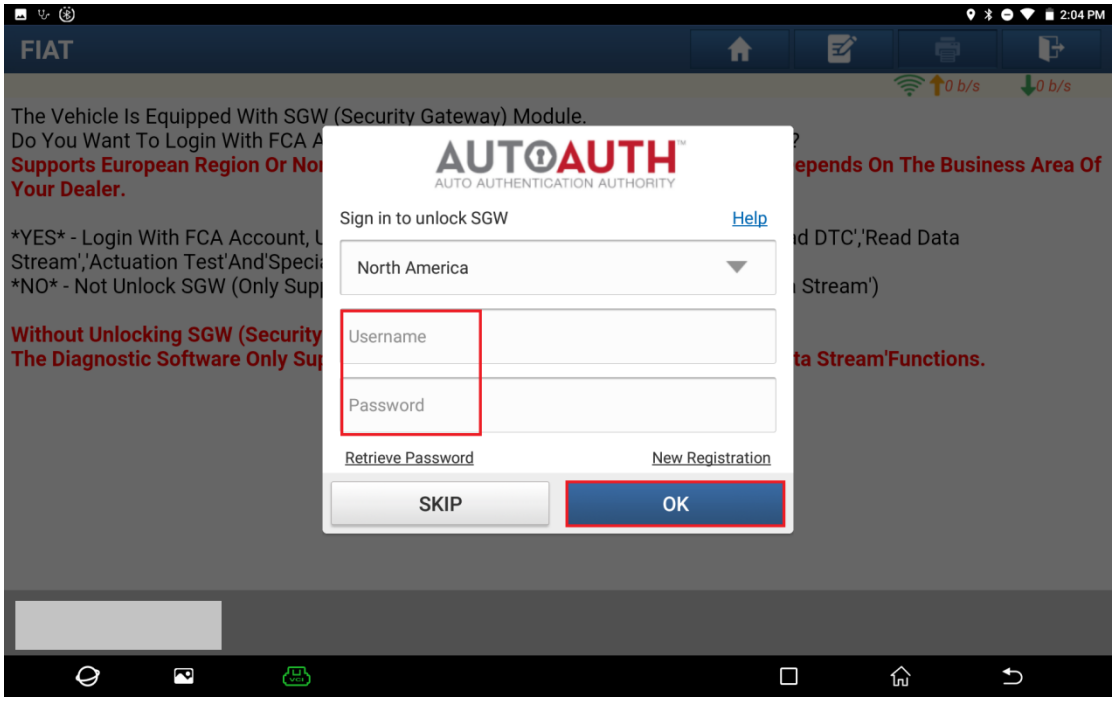


6. Unlocking is successful. Click "OK".

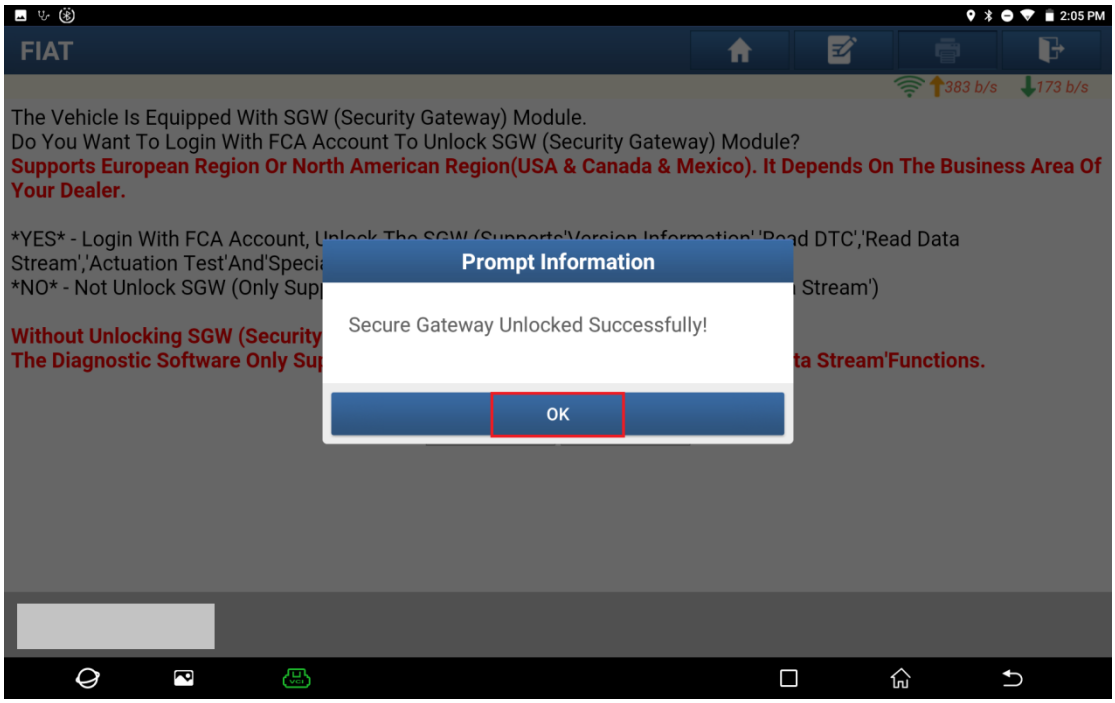


7. Click [Smart Detection] to scan the entire vehicle systems.

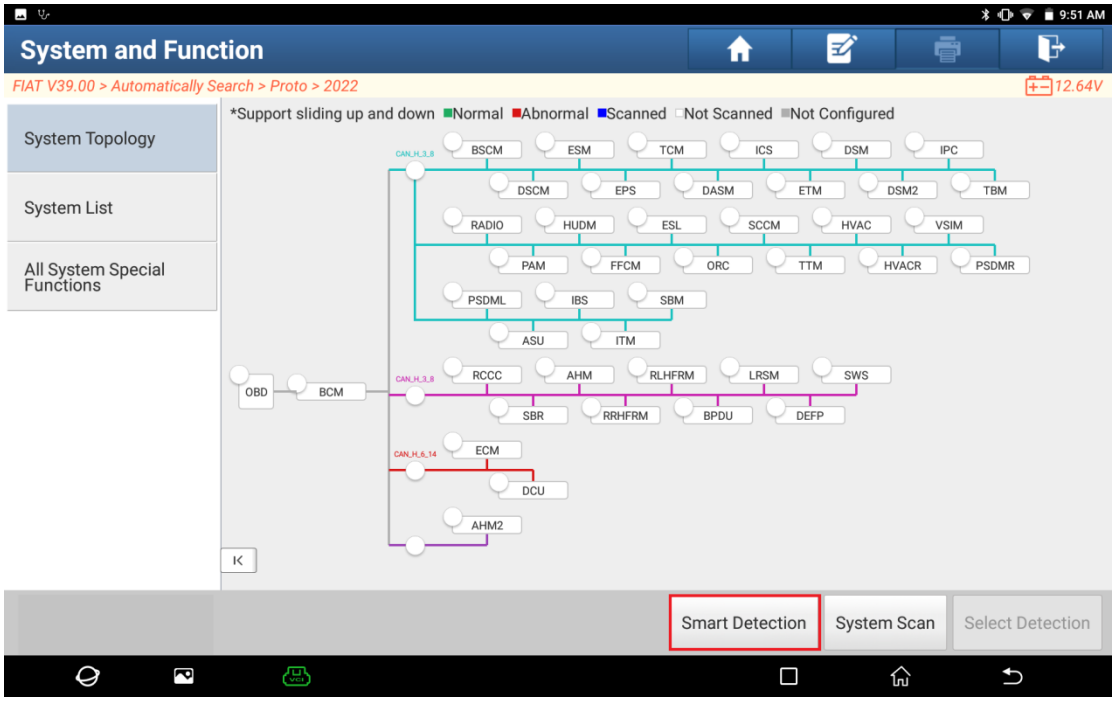


8. Click [ECM (Engine Control Module)] to enter the system.

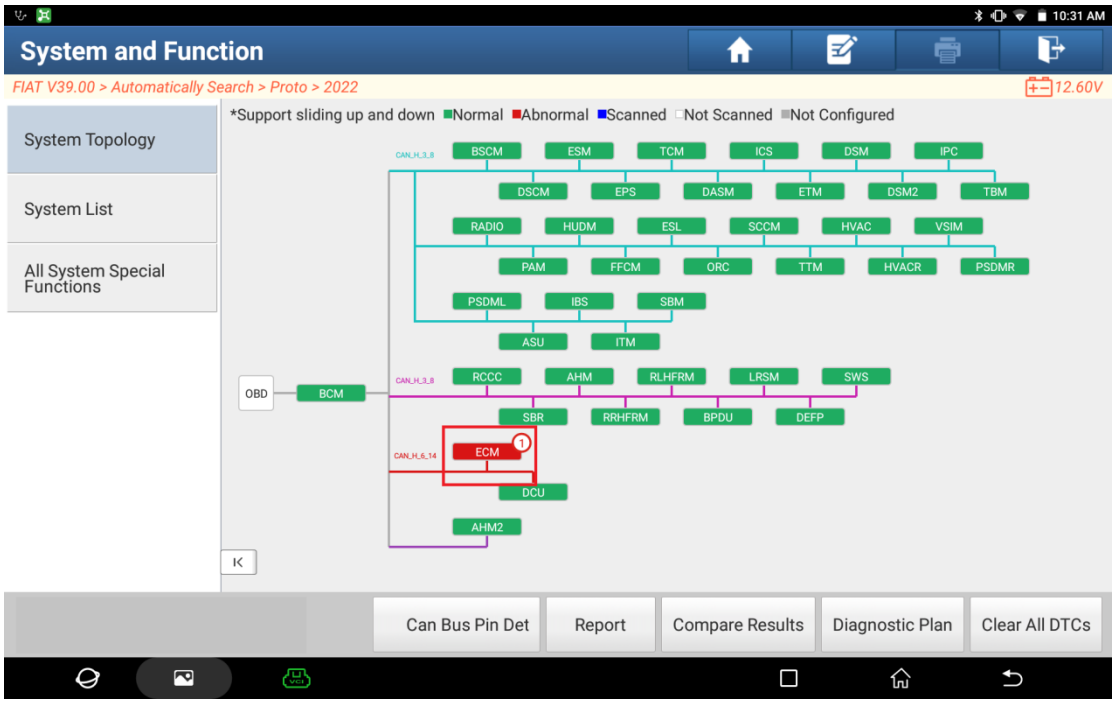


9. Choose [Special Function].

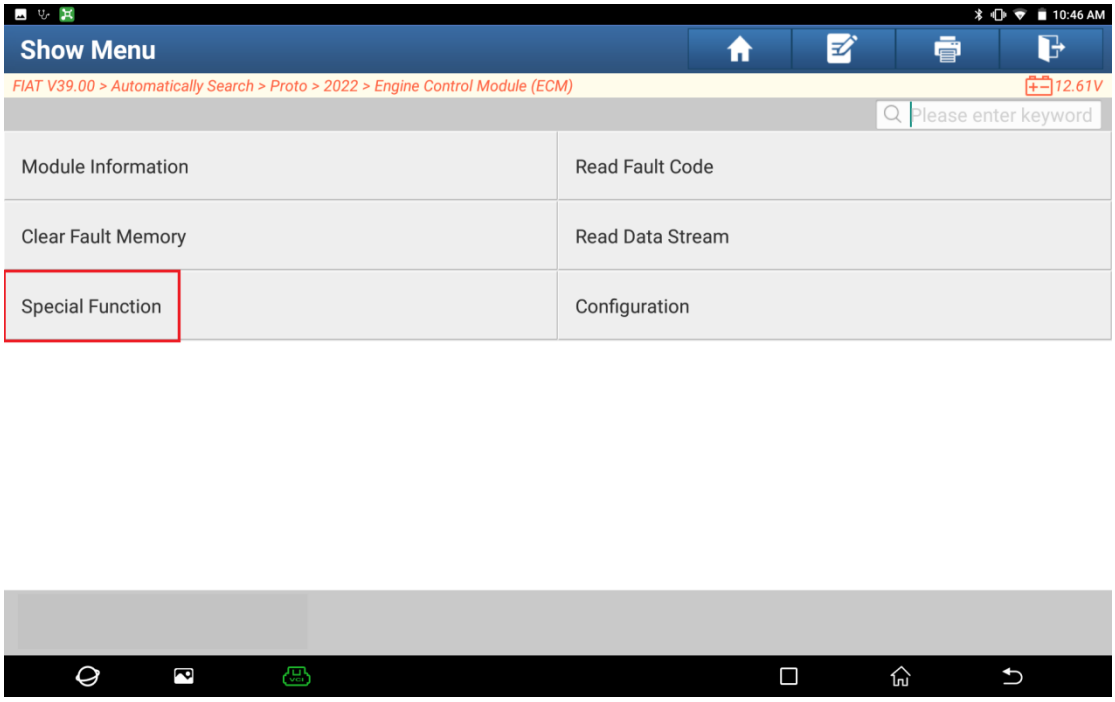


10. Choose [Misc Function].

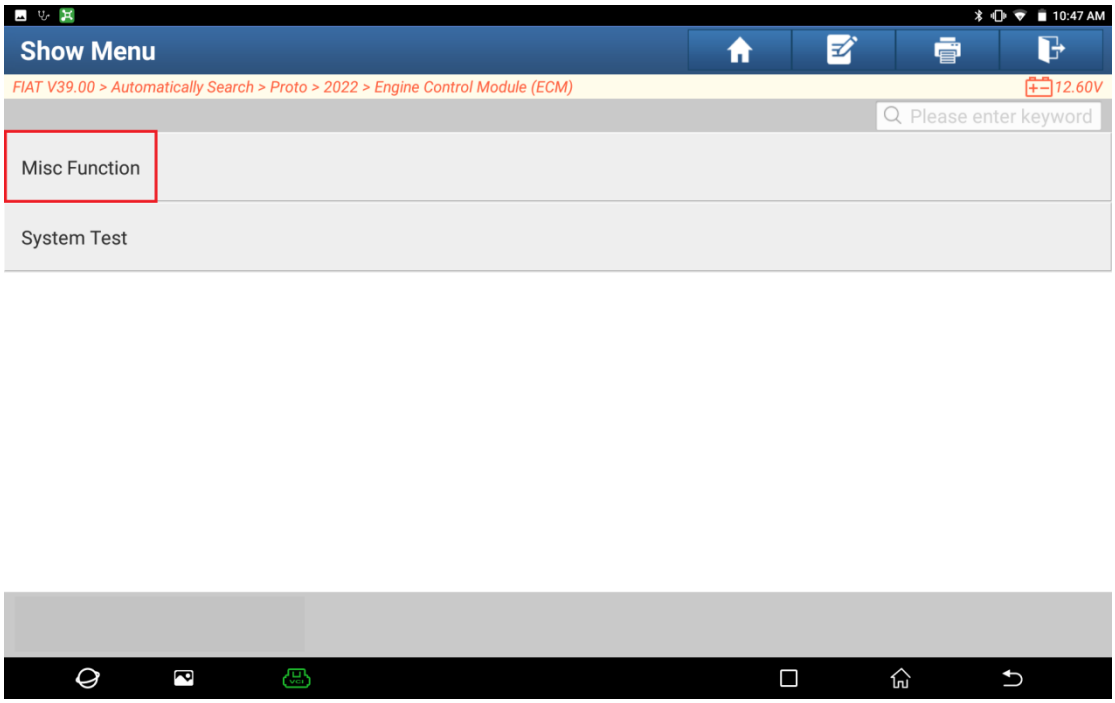


11. Choose [Intake Throttle Valve Replacement].

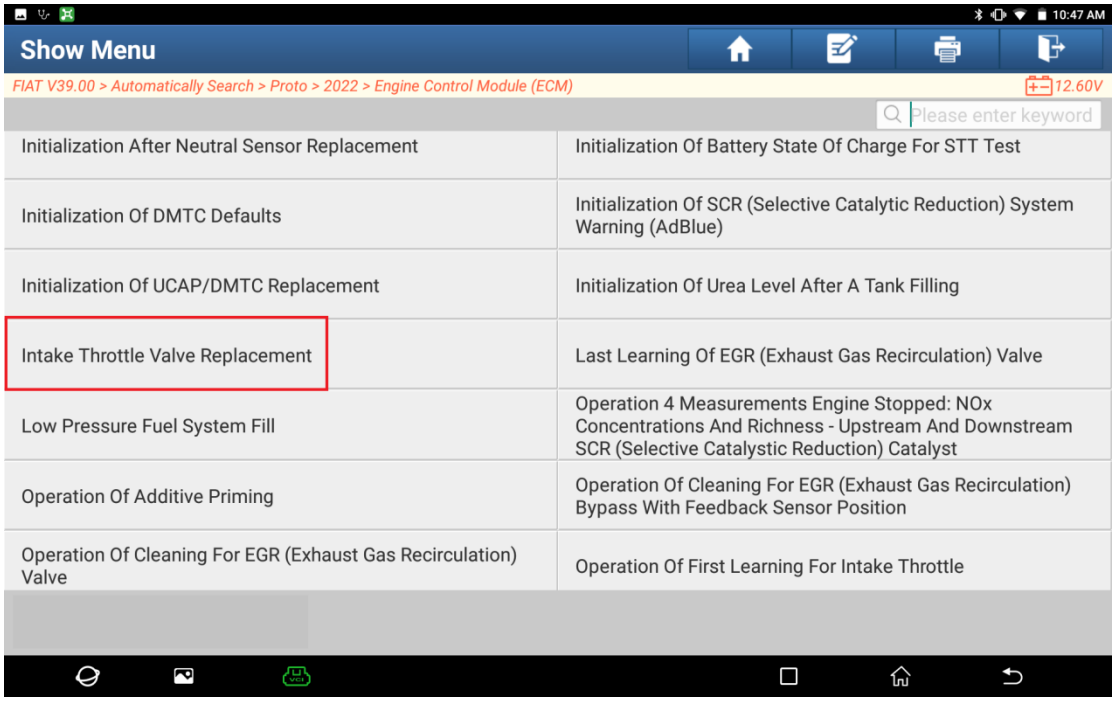


12. Choose "OK".

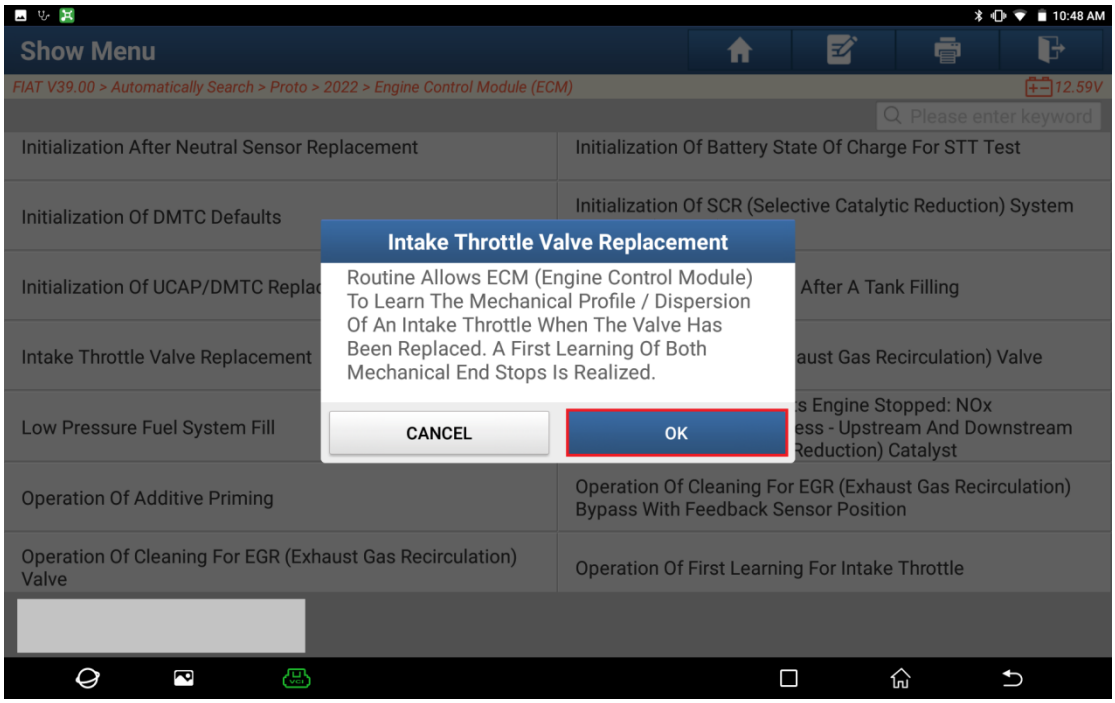


13. Choose "OK".

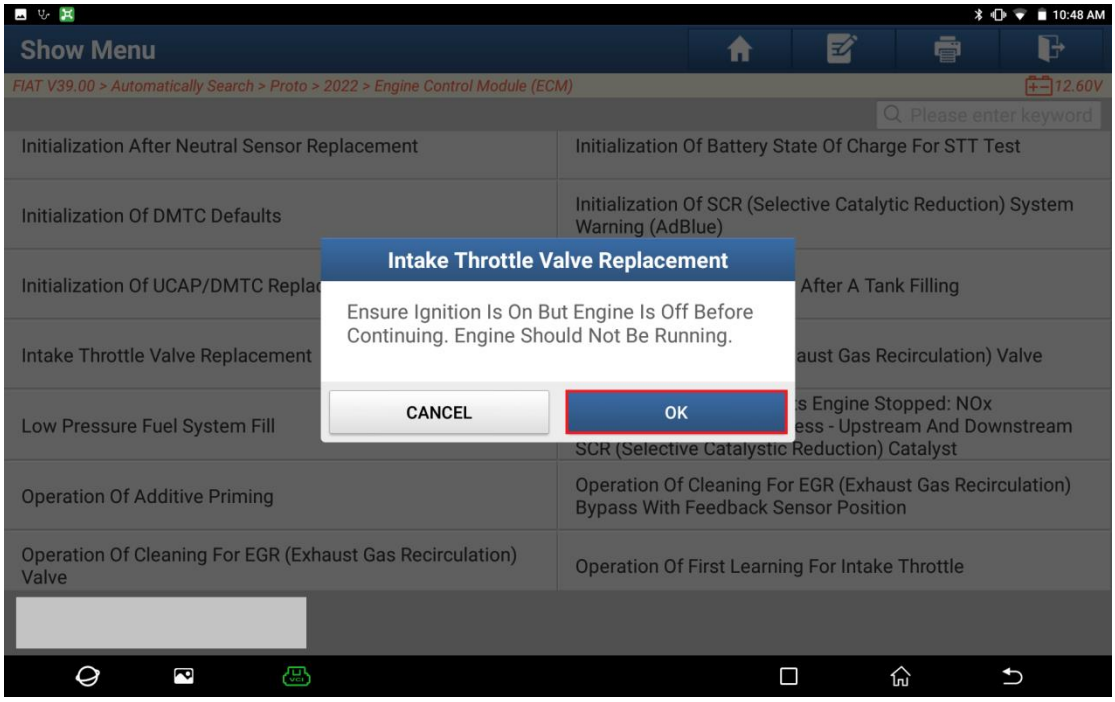


14. Choose "OK".

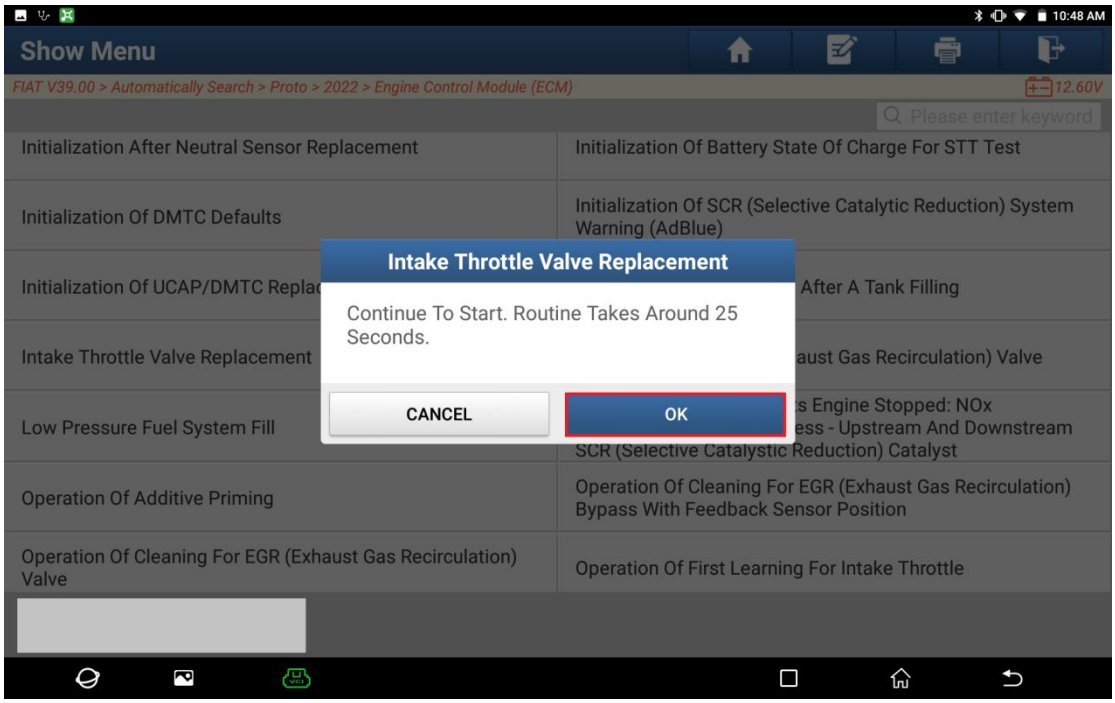


15. Choose "OK".

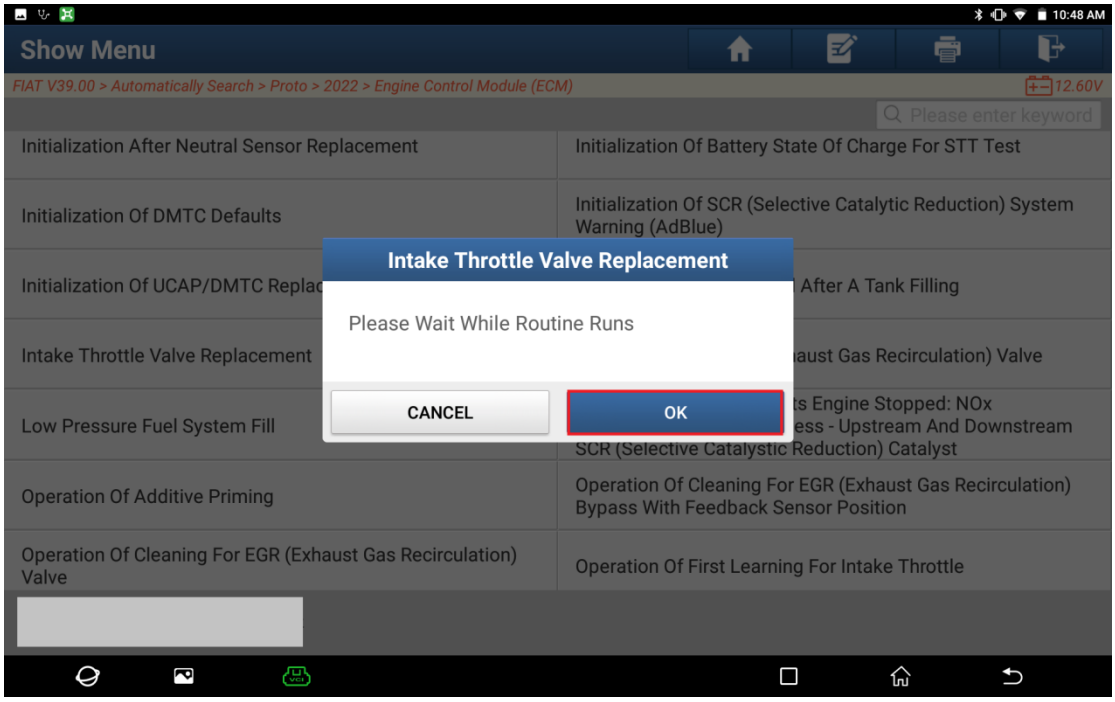

16. Wait for the countdown to end.

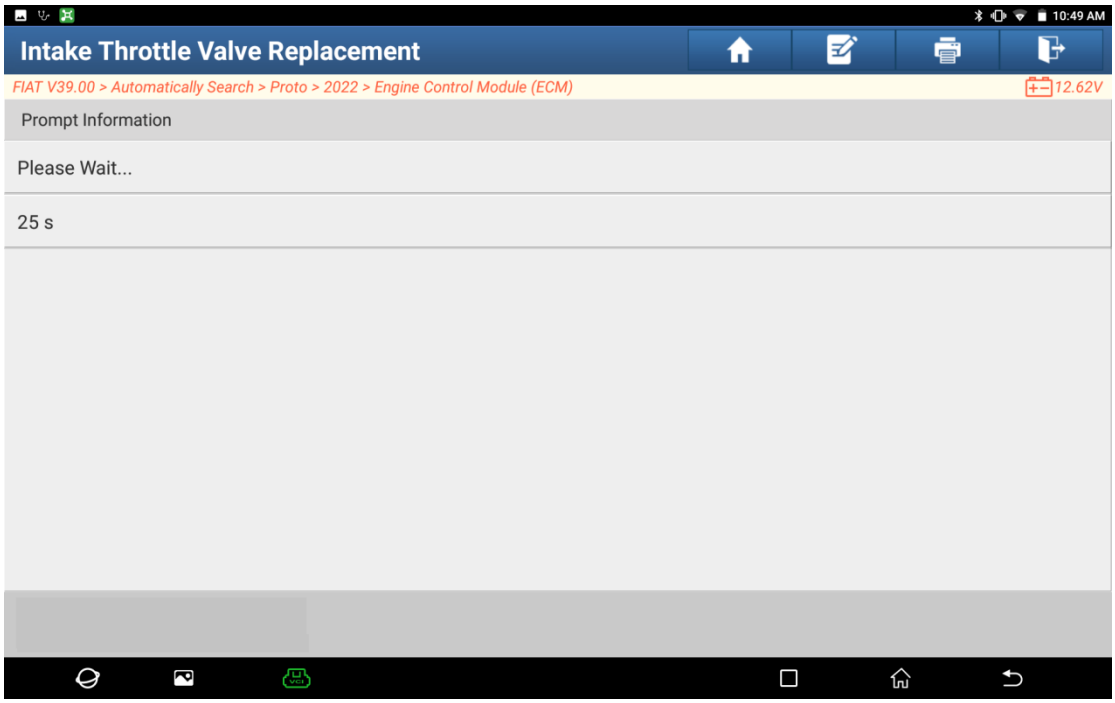

17. Choose "OK". Program execution is completed.

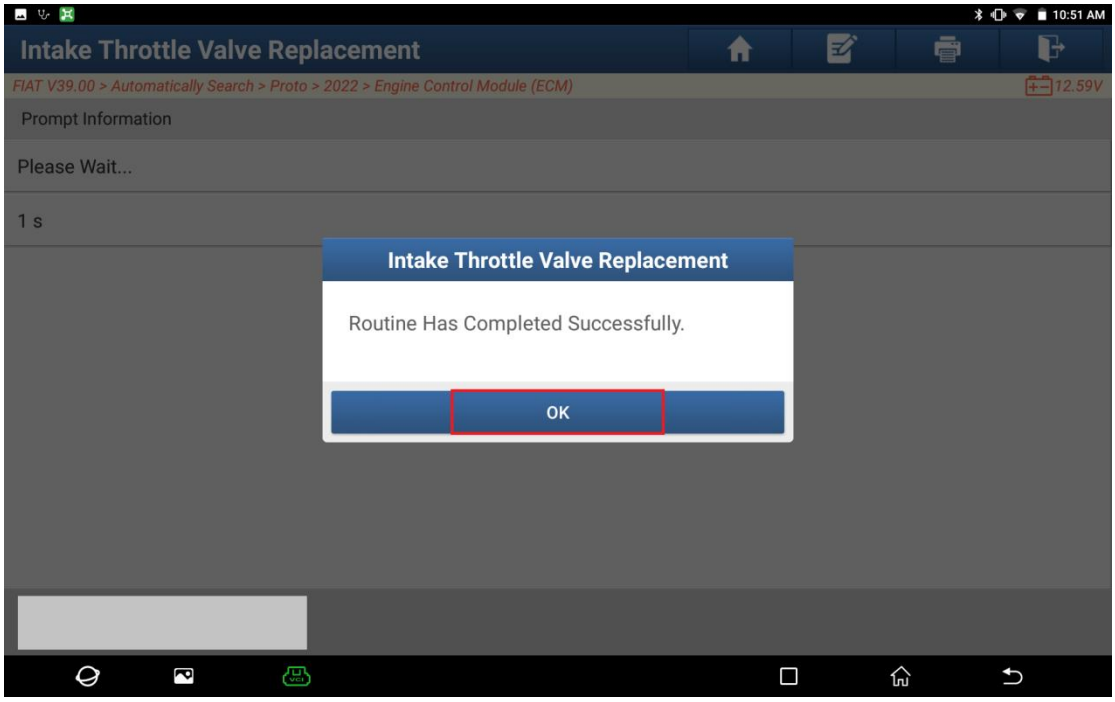

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.