


CHRYSLER RAM 1500 2020 Reset of SCR Long Term Adaptation Factor



Supported Equipment: Launch's full range of comprehensive diagnostic equipment

Function Description: SCR (Selective Catalytic Reduction) long term adaptation factor reset on CHRYSLER RAM 1500


Tested Model: CHRYSLER/2020/RAM 1500, VIN: 1C6SRFJM3LN2*****

1. On a PRO3 LINK, choose [Local Diagnose] and then [CHRYSLER] to test.

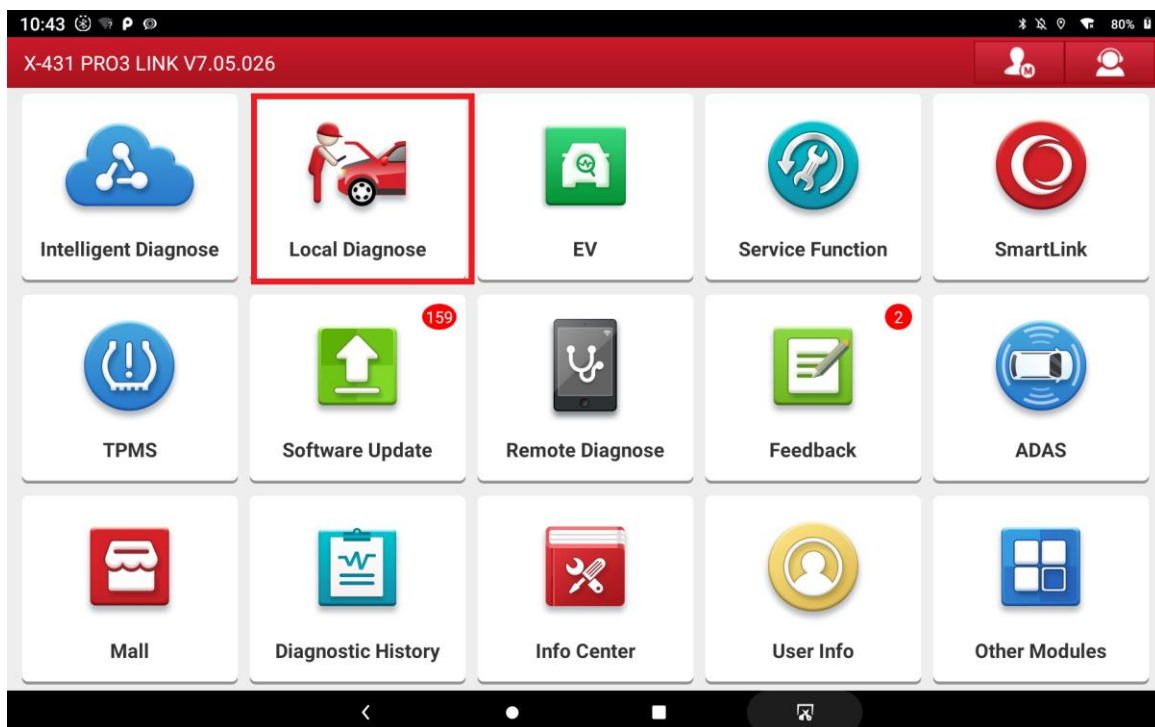


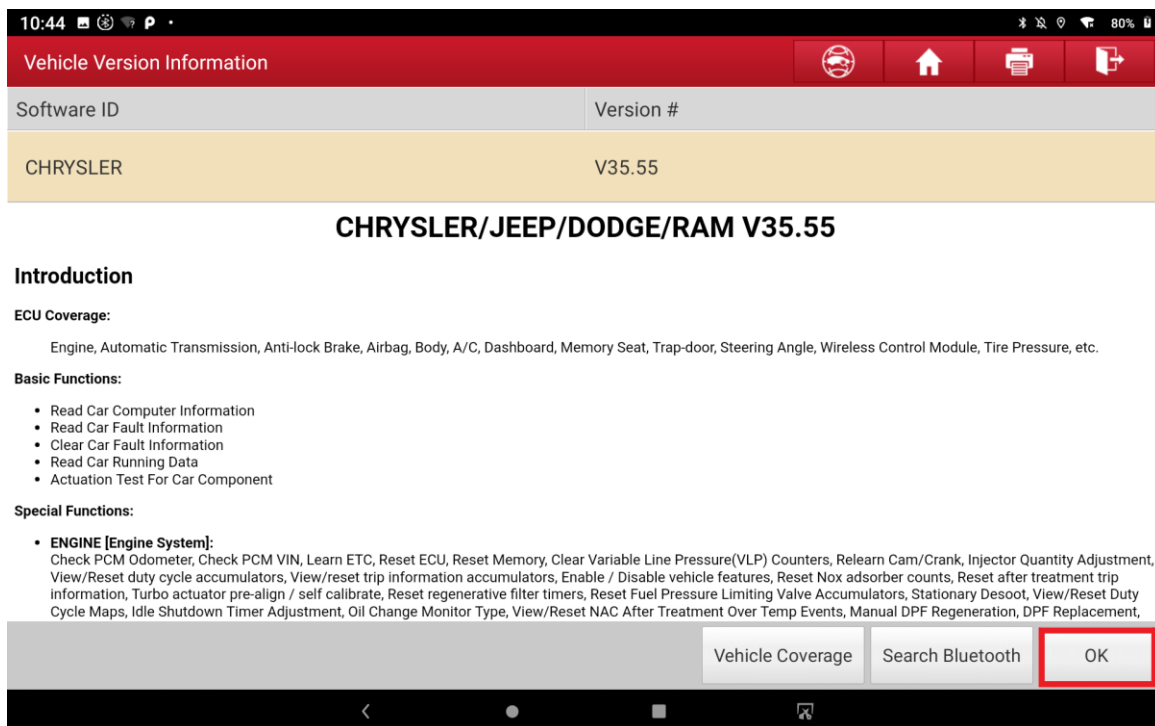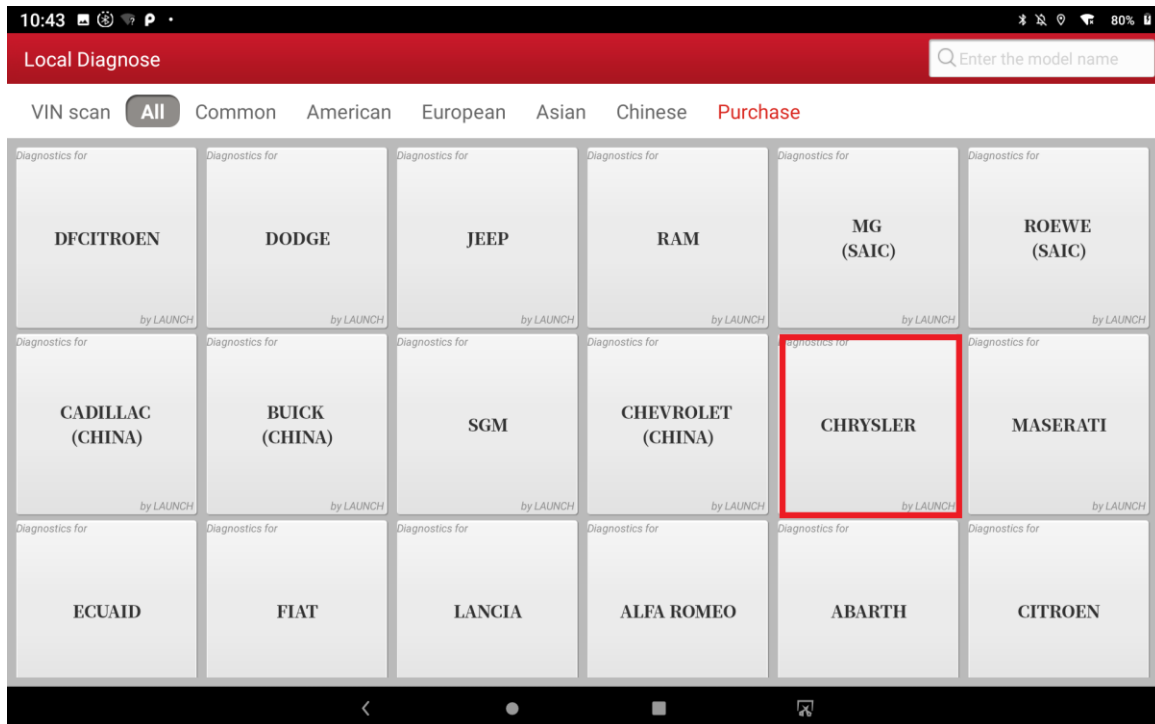


2. Choose [Automatically Search] to identify vehicle models automatically.

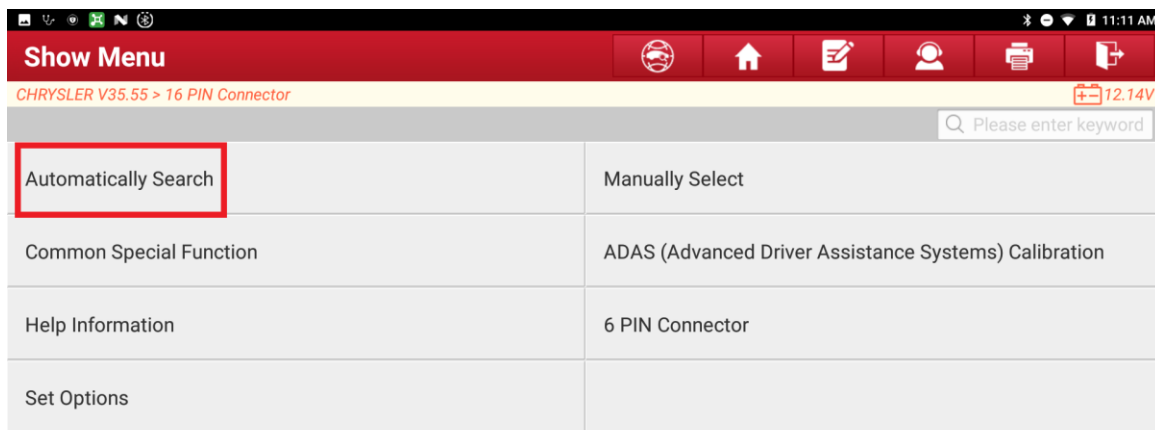


3. Click "OK".

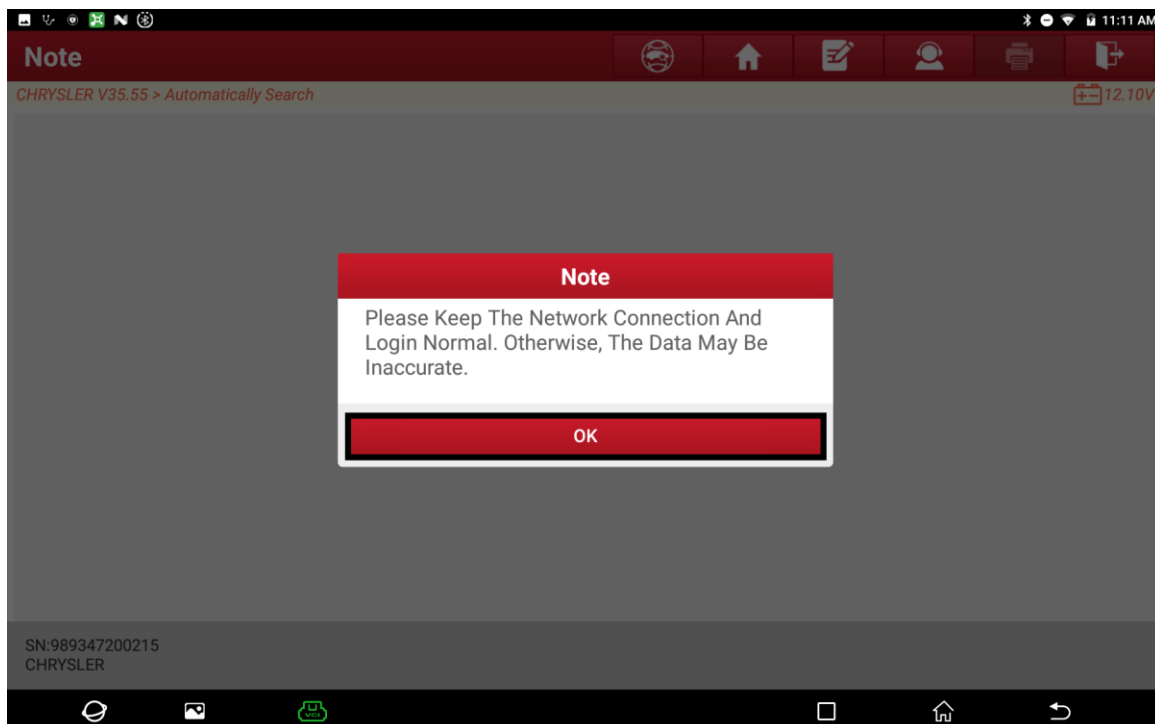


4. Click "OK" to unlock the SGW.

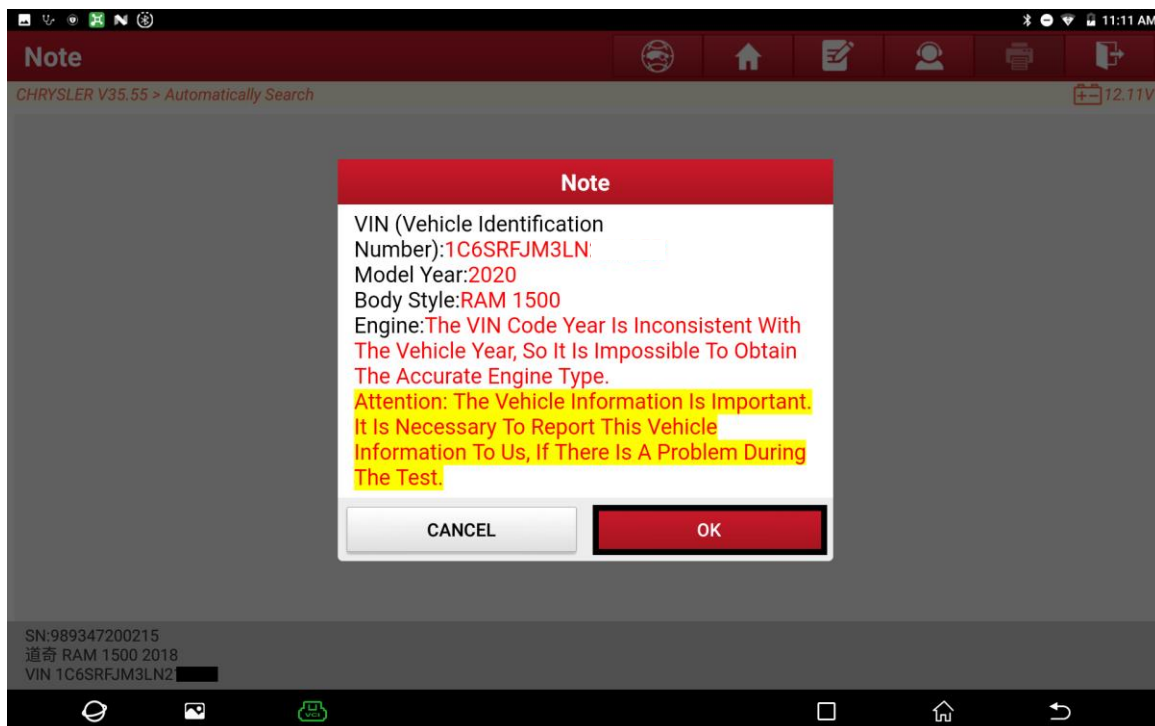


5. Click "OK".

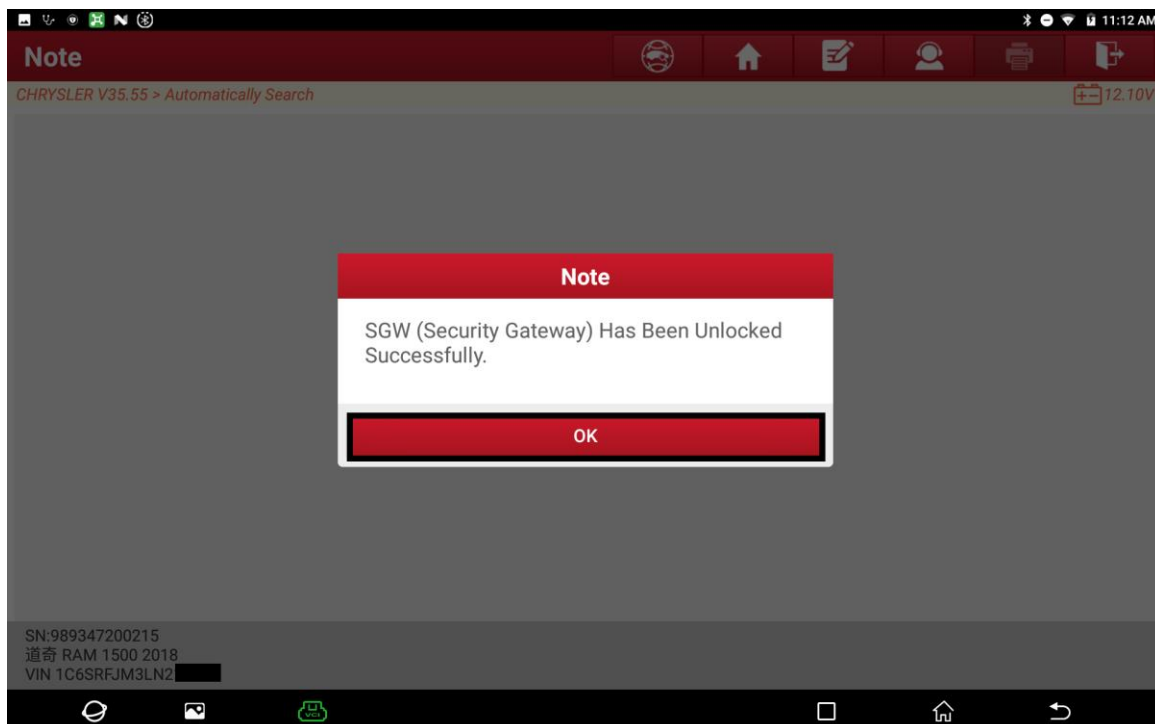


6. On the PRO3 LINK, click [Smart Detection] to scan the entire vehicle systems.

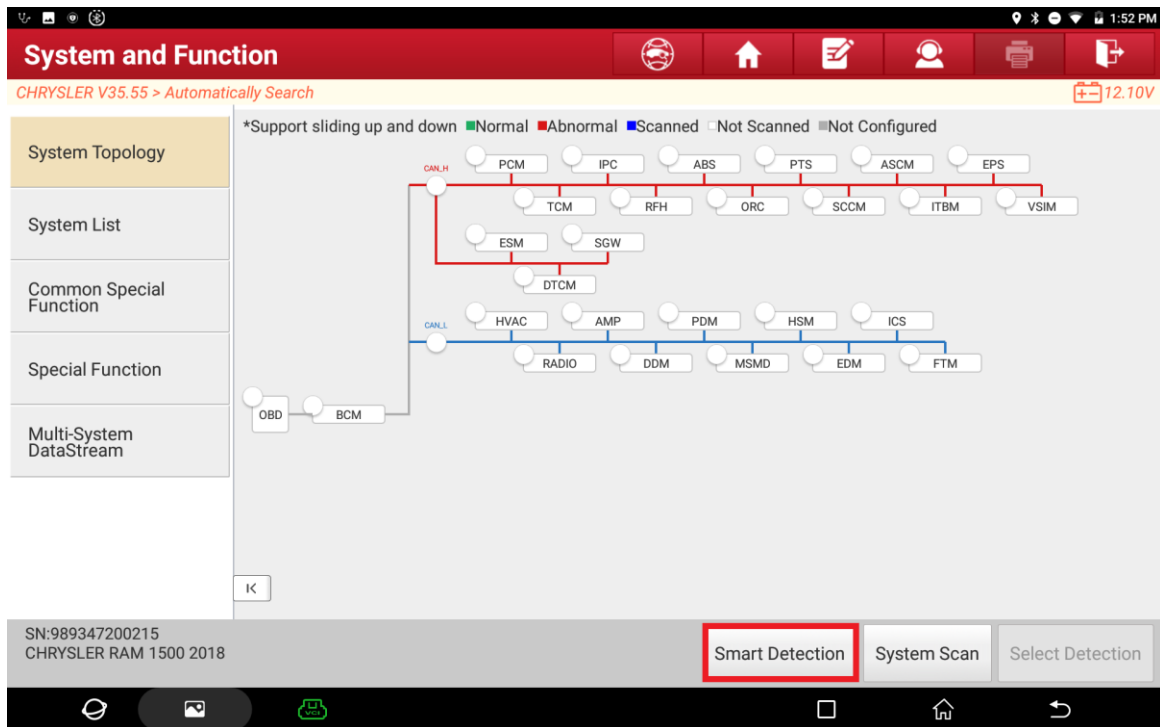


7. Click [PCM (Powertrain Control Module)] to enter the system.

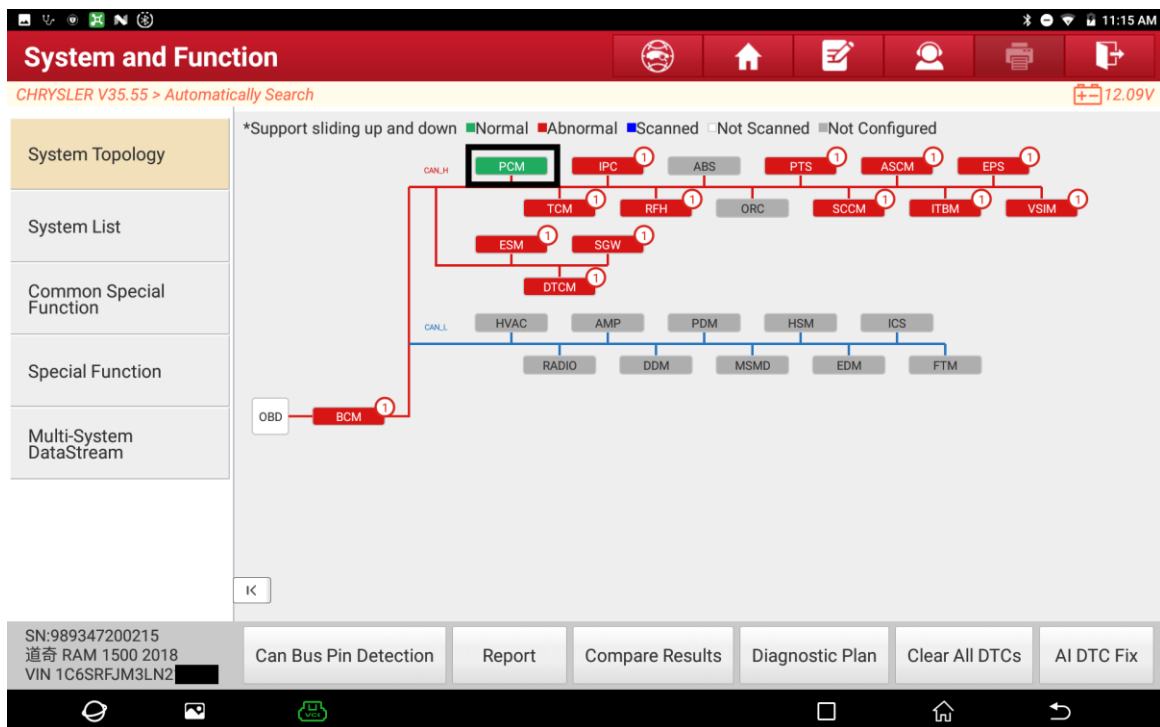


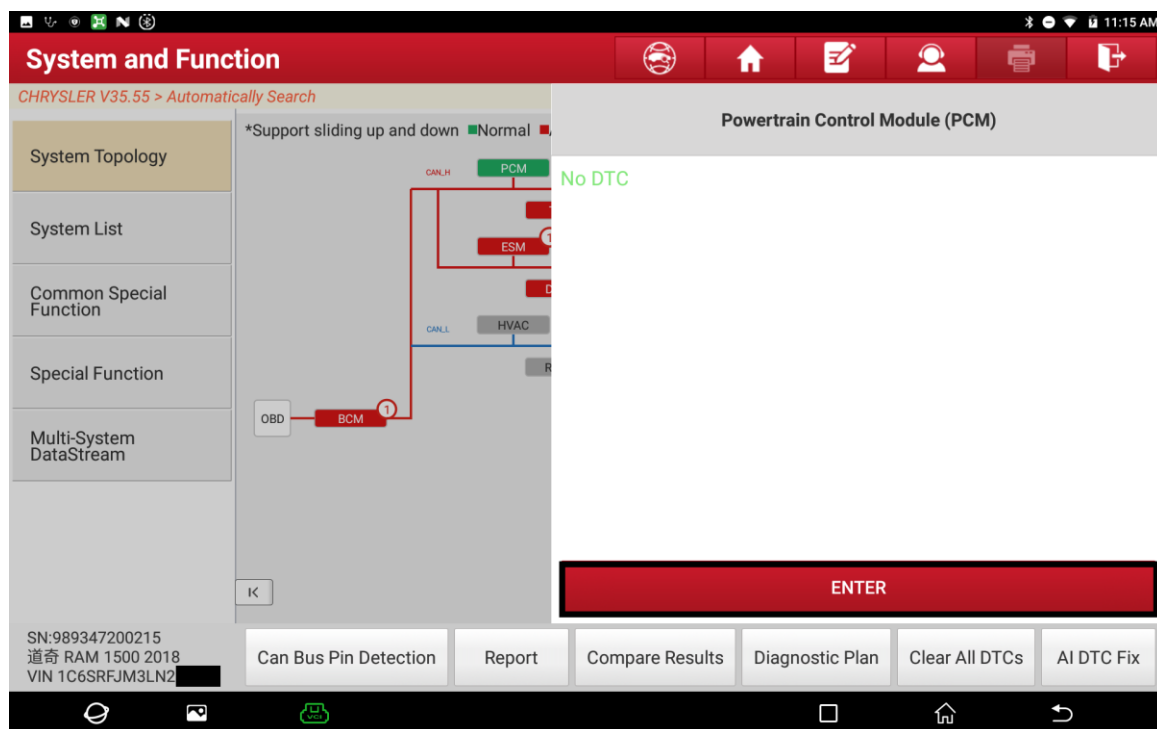


8. Choose [Special Function].

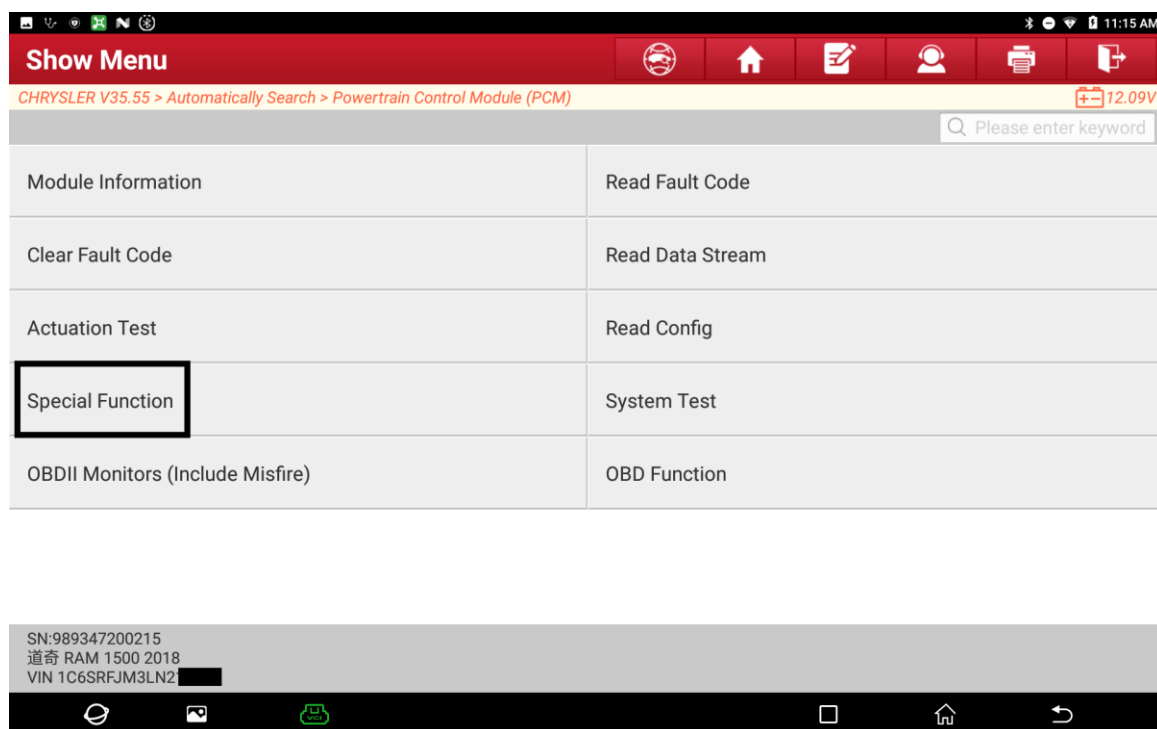


9. Choose [Reset Of SCR (Selective Catalytic Reduction) Long Term Adaptation Factor].

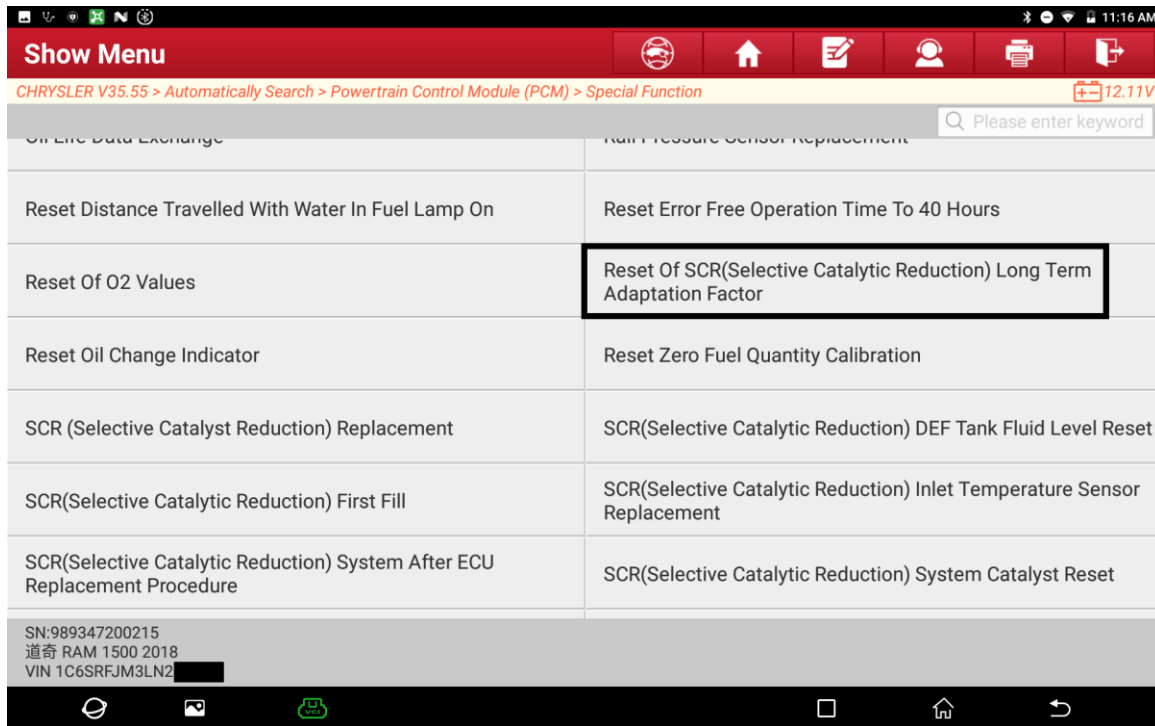


10. Click "OK".

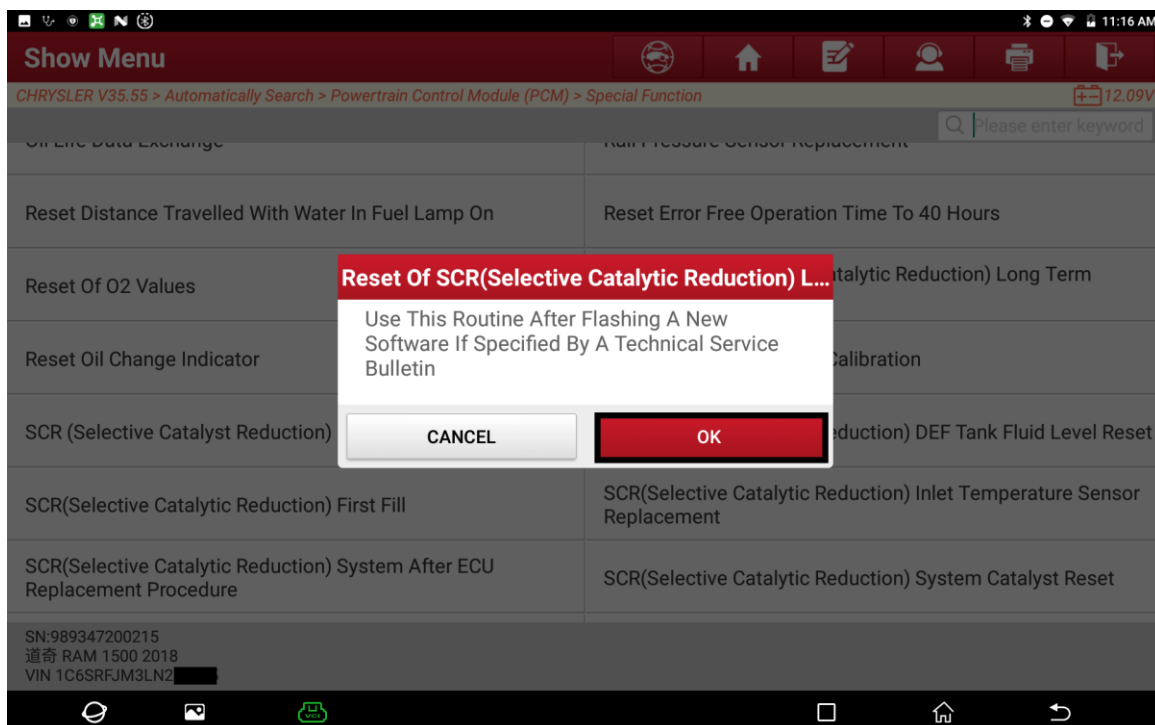

11. Click "OK".

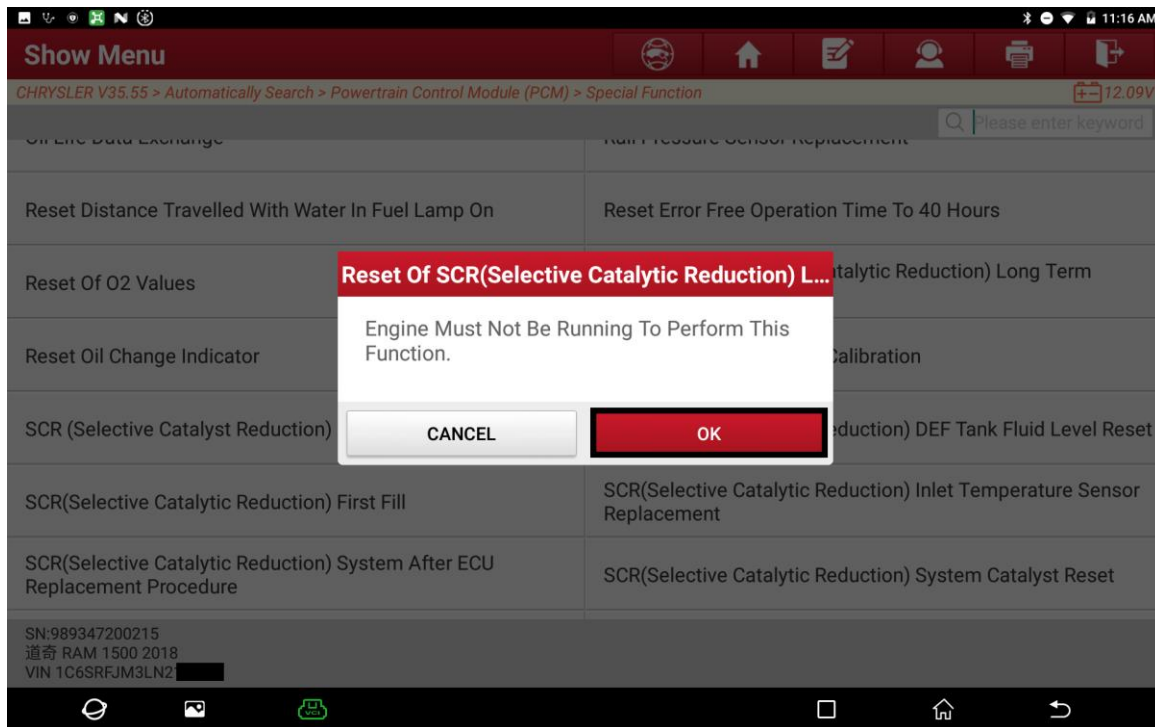

12. Click "OK". The operations are completed.

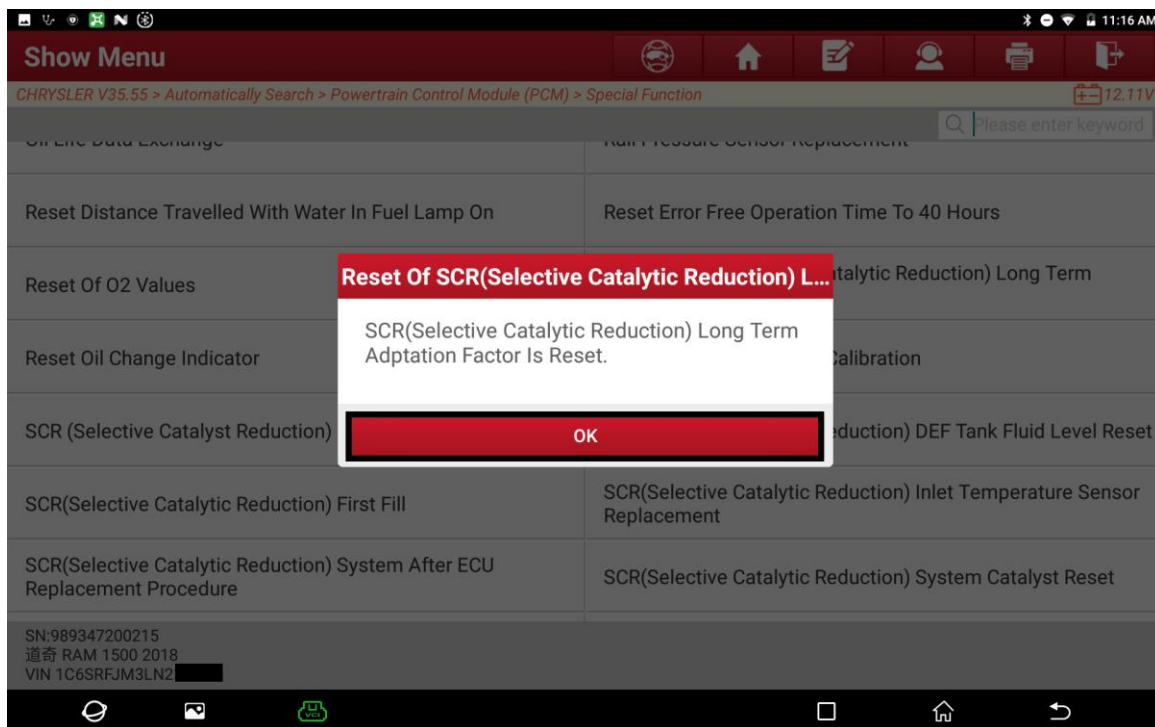

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.