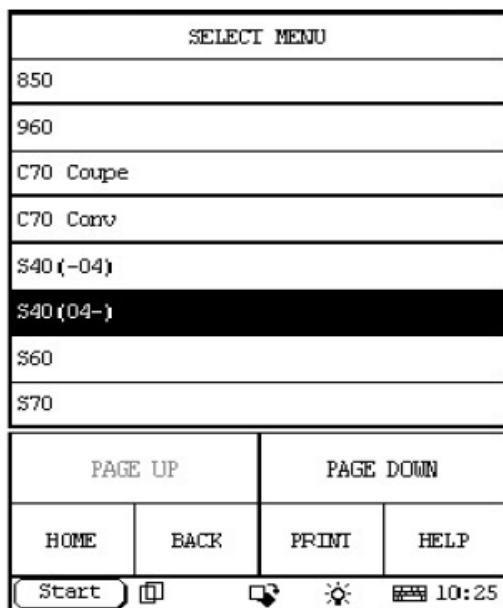## Programming the time conditions for service

This function is intended to Program time (months) parameter. This parameters is used to set the number of months of the vehicle may be driven before the service reminder indicator (SRI) lights.
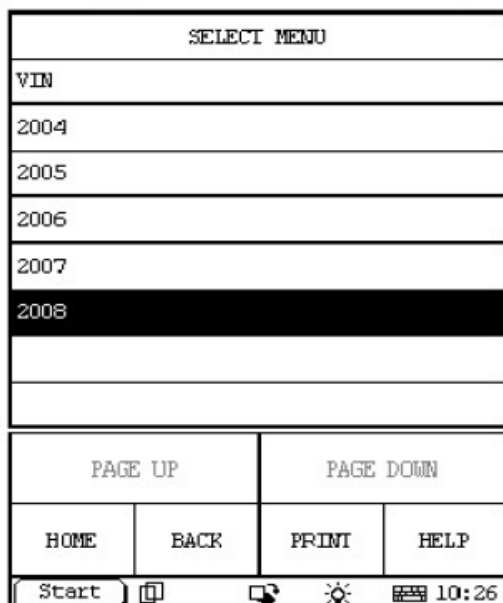
Now we take S40(04-) 2008 30786352 AD (ECU Diagnostic Part Number) as an example to illustrate the operation:

Note: The highlight item in the figure indicates corresponding action.

1. step 1:   S40(04-)

SELECT MENU
850
960
C70 Coupe
C70 Conv
S40 (-04)
S40 (04-)
S60
S70

PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP

Start □   ⟱   ☼   ▦ 10:25

2. step 2:   select year

SELECT MENU
VIN
2004
2005
2006
2007
2008

PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP

Start □   ⟱   ☼   ▦ 10:26

3. step 3: select DIM

```
          SELECT MENU
DIM(Driver information module)
PDM(Passenger door module)
PSM(Power seat module)
DDM(Driver door module)
CCM(Climate control module)
PHM(Phone module)
SWM(Steering wheel module)
AUD(Audio Module)

       PAGE UP          PAGE DOWN

  HOME     BACK      PRINT      HELP

( Start )  ▯      ◻    ☼    ▦ 10:27
```

4. step 4:
   Select: Special Function.

If you can't find the Special Function menu, it means the function has not been developed on your vehicle. Please record the VIN (Vehicle Identification Number) and Version Information (can be read by X431 with the function: Reading off control module ID) and email to Launch (x431@cnlaunch.com). We may work out a solution on how to solve the problem.

```
          Select function
Reading off control module ID
Reading off Diagnostic Trouble Codes
Erasing Diagnostic Trouble Codes
Parameter display
Activating components/functions
Service Reset
Special Function


       PAGE UP          PAGE DOWN

  HOME     BACK      PRINT      HELP

( Start )  ▯      ◻    ☼    ▦ 10:28
```

5. step 5:

Select: Programming the time conditions for service

```
┌─────────────────────────────────────────┐
│   Please select special function item    │
├─────────────────────────────────────────┤
│ Resetting the Service reminder           │
│ indicator(SRI)                           │
├─────────────────────────────────────────┤
│ Testing all displays and lamps in        │
│ instrument                               │
├─────────────────────────────────────────┤
│ Programming distance conditions for      │
│ service                                  │
├─────────────────────────────────────────┤
│ Programming the time conditions for      │
│ service                                  │
├─────────────────────────────────────────┤
│ Programming the engine time conditions   │
│ for service                              │
├─────────────────────────────────────────┤
│ Programming the unit for temperature     │
├─────────────────────┬───────────────────┤
│     PAGE UP         │     PAGE DOWN      │
├──────────┬──────────┼─────────┬─────────┤
│  HOME    │  BACK    │  PRINT  │  HELP   │
├──────────┴──────────┴─────────┴─────────┤
│ Start ) ▢      ⤵    ☼   ▦ 15:13         │
└─────────────────────────────────────────┘
```

6. step 6:

The information of Programming the time conditions for service:

Ignition on.

There are three service parameters that can be programmed. This parameters is used to set the number of months of the vehicle may be driven before the service reminder indicator (SRI) lights.

The following values may be selected: 6 months, 12 months.

Read off the parameter that is programmed.

To change the service parameter, mark the desired value in the list and start programming.

```
┌─────────────────────────────────────────┐
│            Note information              │
├─────────────────────────────────────────┤
│                                          │
│ Ignition on.                             │
│ There are three service parameter that   │
│ can be programmed. This parameters is    │
│ used to set the number of months the     │
│ vehicle may be driven before the         │
│ service reminder indicator(SRI) lights.  │
│ The following values may be selected: 6  │
│ months, 12 months.                       │
│ Read off the parameter that is           │
│ programmed.                              │
│ To change the service parameter, mark    │
│ the desired value in the list and start  │
│ programming.                             │
│                                          │
├─────────────────────┬───────────────────┤
│        OK           │      CANCEL        │
├─────────────────────┴───────────────────┤
│ Start ) ▢      ⤵    ☼   ▦ 15:16         │
└─────────────────────────────────────────┘
```

7. step 7:

Select Ok then it will send command to ECU, and display information like this:
Note! If not support information displayed, it will exit this function.

```
┌─────────────────────────────────┐
│        Note information         │
├─────────────────────────────────┤
│                                 │
│                                 │
│                                 │
│                                 │
│          Not Supported          │
│                                 │
│                                 │
│                                 │
│                                 │
├────────────────┬────────────────┤
│      OK        │     PRINT      │
├────────────────┴────────────────┤
│ Start  🗀      🗗   ☼   ▤ 14:41 │
└─────────────────────────────────┘
```

If support, display information like this:

```
┌─────────────────────────────────┐
│        ACTUATION TEST           │
├─────────────────────────────────┤
│ Programmed Value      12 month  │
├─────────────────────────────────┤
│ F1:Time condition for           │
│ service = 6 month               │
├─────────────────────────────────┤
│ F2:Time condition for           │
│ service = 12 month              │
├─────────────────────────────────┤
│                                 │
├─────────────────────────────────┤
│                                 │
├─────────────────────────────────┤
│                                 │
├─────────────────────────────────┤
│                                 │
├───────────┬───────────┬─────────┤
│ PAGE UP   │ PAGE DOWN │  PRINT  │
├───────────┼───────────┼─────────┤
│    F1     │    F2     │  EXIT   │
├───────────┴───────────┴─────────┤
│ Start 🗀      🗗   ☼   ▤ 15:19  │
└─────────────────────────────────┘
```

The first line, Programmed Value 12 month, is the present programmed value for your vehicle, if you want to change this value, you can select the desired value in the list:
F1: Time condition for service = 6 month
F2: Time condition for service = 12 month
For example: you want to change this value to 6 month, please select F1 and it will start programming. When programming finish, the Programmed Value will change to 6 month as the following figure, it means that the programming succeeds.
Note! Maybe some vehicles can not be programmed. (Programmed Value does not change

when programming)

ACTUATION TEST	
Programmed Value	6 month
F1:Time condition for service = 6 month	
F2:Time condition for service = 12 month	

PAGE UP	PAGE DOWN	PRINT
F1	F2	EXIT

Start 🔲   ⤵ ☀ ⌨ 15:24

8. step 8:

When you want to exit this programming, please select EXIT:

ACTUATION TEST	
Programmed Value	6 month
F1:Time condition for service = 6 month	
F2:Time condition for service = 12 month	

PAGE UP	PAGE DOWN	PRINT
F1	F2	**EXIT**

Start 🔲   ⤵ ☀ ⌨ 15:26